

---

# INSTRUCTION SHEET


## AIR SEALS

### GRIPPER INSTALLATION

---

The top surface of the room should be supported while installing gripper. With the room extended the gripper (1) should make surface to surface contact, along it's entire length, with the aluminum extrusion (2). With the room extended and the gripper fully engaged a maximum gap of 0.500" should be maintained, along the length of the room, between the exterior roof surface and the face of the aluminum extrusion. Gripper should be centered on the room and should extend the length of the room within two feet of both ends of the room. (i.e. 10' room = min. 6' gripper)

#### ROOM RETRACTED GRIPPER DISENGAGED

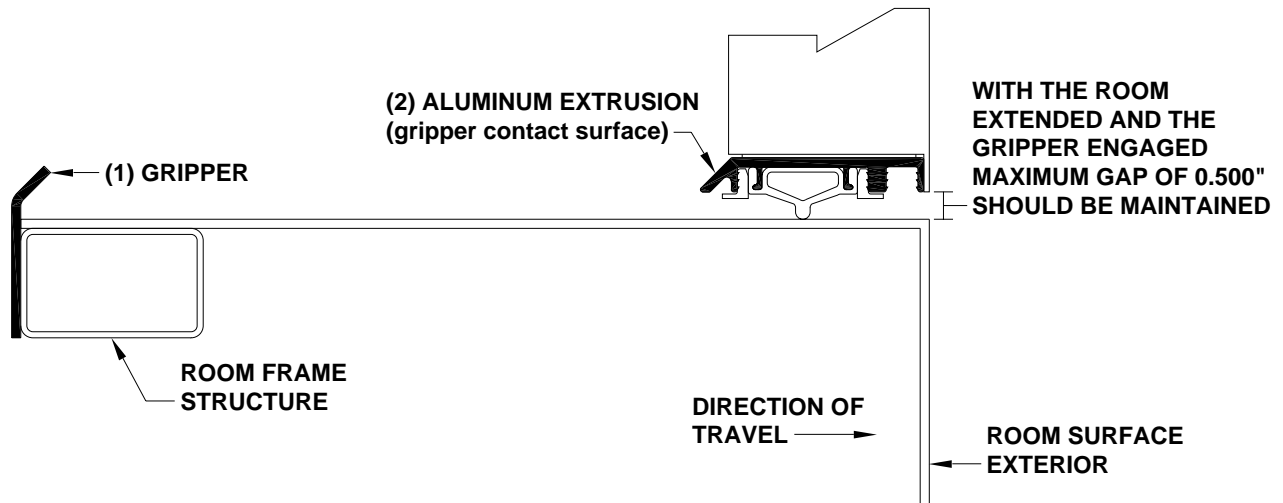

---

#### ROOM EXTENDED GRIPPER ENGAGED

