



INFORMATION BULLETIN

ISSUE DATE: August 31, 2009

TO: All Dealers and Service Centers

FROM: HWH Corporation

RE: Jumper bypass to run 12 or 24 Volt Pumps With Touch Panel Controls

JUMPER BYPASS TO RUN 12 OR 24 VOLT PUMPS WITH TOUCH PANEL CONTROLS

In the event of an HWH Touch Panel controlled system control box, leveling or room control panel failure, the following procedure will allow manual pump operations using jumper wires to run the pump motor. This can be used to extend single-acting (spring return) jacks, to extend or retract double-acting jacks and to extend or retract room extensions, generator slides, etc. This can also be used for a diagnostic procedure. The pump **cannot** be running when attempting to retract single-acting (spring return) jacks.

WARNING: IT IS IMPORTANT TO OBSERVE ALL WARNINGS CONCERNING THE NORMAL OPERATION OF LEVELING SYSTEMS, ROOM EXTENSIONS AND ALL OTHER HWH EQUIPMENT.


WARNING: WHEN OPENING JACK SOLENOID VALVES FOR SINGLE-ACTING JACKS OR THE RETRACT SOLENOID VALVES FOR DOUBLE-ACTING JACKS, THE VEHICLE CAN DROP AND/OR MOVE FORWARD OR BACKWARD WITHOUT WARNING CAUSING INJURY OR DEATH. MAKE SURE PEOPLE AND OBJECTS ARE CLEAR OF THE VEHICLE BEFORE MANUALLY OPENING SOLENOID VALVES. MAKE SURE TRAILERS ARE PROPERLY SUPPORTED OR HITCHED TO A TOW VEHICLE BEFORE OPENING JACK SOLENOID VALVES.

JUMPER PROCEDURES

To run the pump motor with jumper wires, first the master relay must be on. "Jumper A" will turn the master relay on. "Jumper B" can remain in place until manual operation of the pump is finished. When "Jumper B" is applied, the pump motor will run. This jumper should not be connected unless pump operation is required. **Do not leave "Jumper B" connected for an extended period of time. Running the pump motor under load continuously for more than (3) three minutes* can overheat the pump motor causing damage to the motor.** Remove both jumpers when the manual operation is complete.

Only jumper "B" for the pump relay is needed with Manual Touch Panel Control Systems.

*Pump run times will vary with pump or motor size and pump operation. Larger pump motors can run longer.

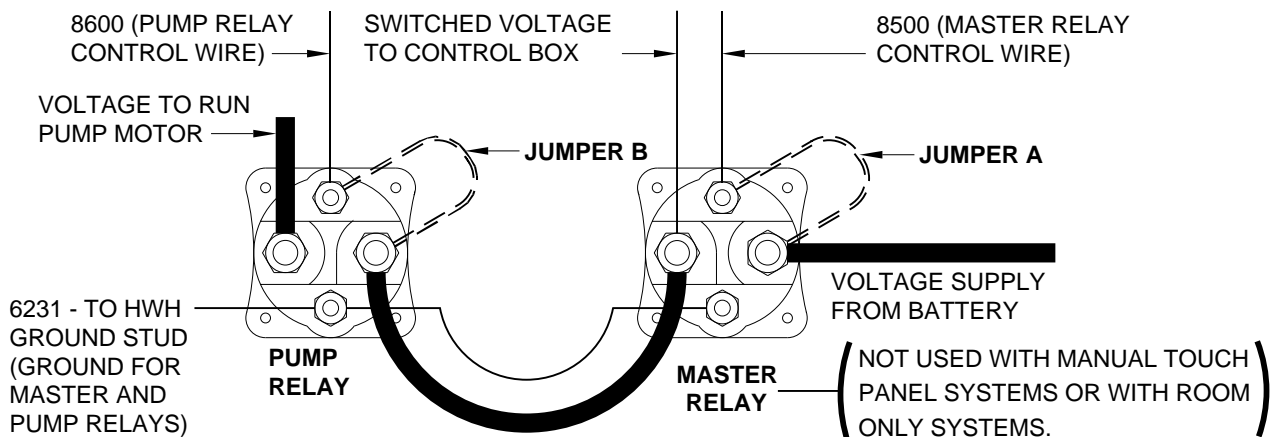

JUMPER A - Constant jumper to turn master relay on
JUMPER B - Intermittent jumper to run pump motor

MI95.74
09JAN18