


HWH COMPUTER-CONTROLLED HYDRAULIC LEVELING SYSTEM WITH AUTOMATIC AIR DUMP, STRAIGHT-ACTING JACKS AND HYDRAULIC ROOM EXTENSION

CAUTION: READ AND UNDERSTAND ENTIRE OPERATOR'S MANUAL INCLUDING CAUTIONS, BEFORE OPERATING. THIS SHEET IS FOR QUICK REFERENCE ONLY.

IMPORTANT: DO NOT EXTEND THE ROOM IF THE COACH HAS NOT BEEN LEVELED AND STABILIZED ON THE HYDRAULIC LEVELING SYSTEM.

AUTOMATIC LEVELING

1. TURN IGNITION SWITCH TO THE "ACC" OR "ON" POSITION. TRANSMISSION SHIFT MUST BE IN THE POSITION FOR PARKING. PARK BRAKE MUST BE SET EITHER MANUALLY OR AUTOMATICALLY. IF "NOT IN PARK/BRAKE" LIGHT IS ON, CHECK SHIFT AND BRAKE POSITION.
2. PRESS "HYD". THE HYDRAULIC OPERATION INDICATOR LIGHT WILL COME ON STEADY.
3. PRESS "HYD" SECOND TIME. THE INDICATOR LIGHT WILL FLASH. COACH WILL LEVEL THEN THE SYSTEM WILL TURN OFF.

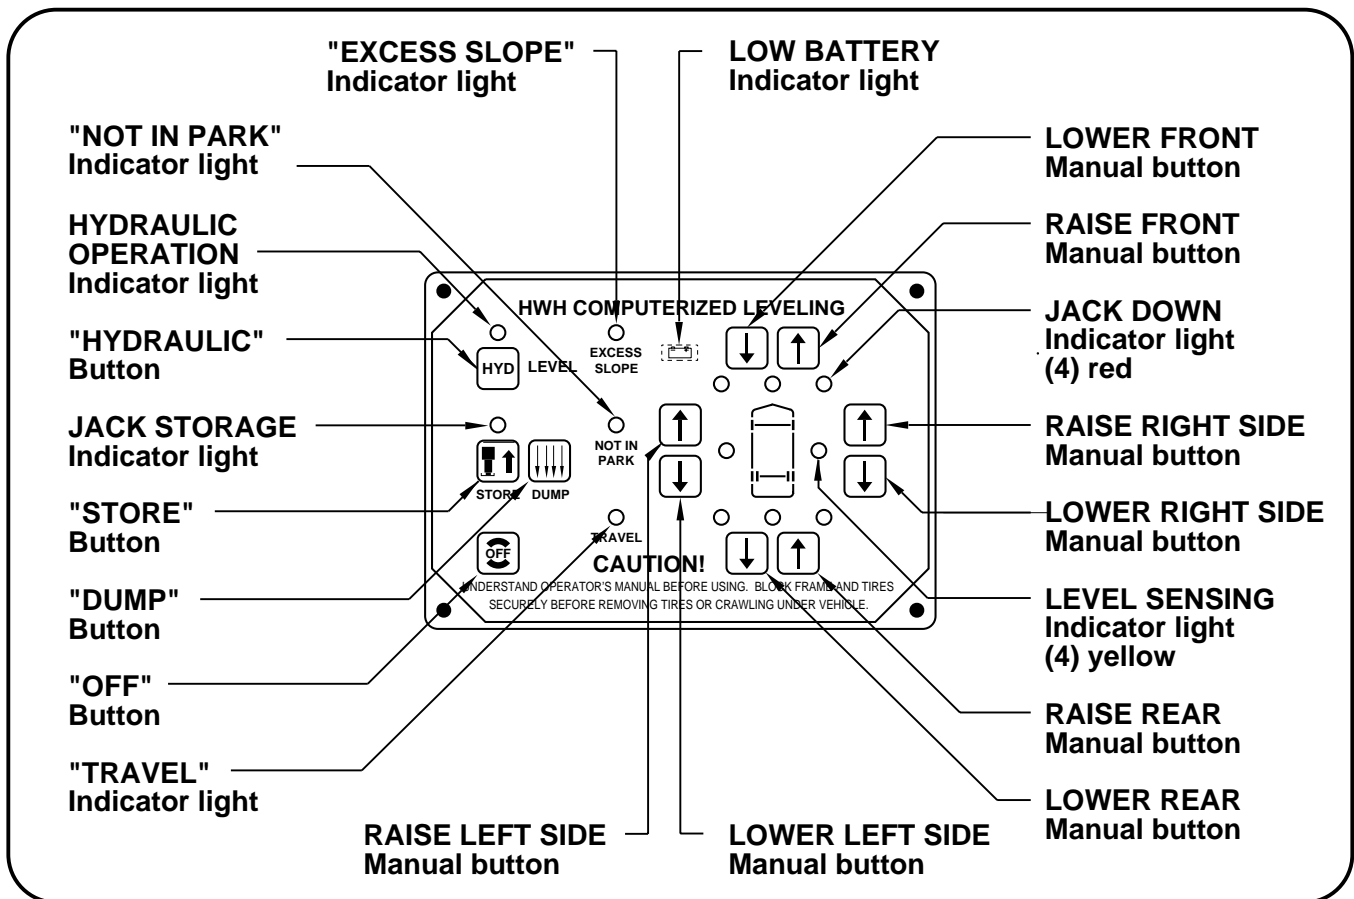

(CONTINUED)

ML13300/MP35.9921
31JUL97

HWH COMPUTER-CONTROLLED HYDRAULIC LEVELING SYSTEM WITH AUTOMATIC AIR DUMP, STRAIGHT-ACTING JACKS AND HYDRAULIC ROOM EXTENSION (CONTINUED)

STORE OPERATION

1. START THE COACH ENGINE.
2. PRESS "HYD" ONCE. THE INDICATOR LIGHT WILL COME ON STEADY.
3. PRESS "STORE". STORE INDICATOR LIGHT WILL FLASH, JACKS WILL RETRACT.
4. WHEN "TRAVEL" LIGHT IS ON, THE COACH MAY BE MOVED. SYSTEM WILL SHUT ITSELF OFF.

IMPORTANT: DO NOT INTERRUPT POWER TO THE SYSTEM UNTIL THE SYSTEM AUTOMATICALLY SHUTS ITSELF OFF.

NOTE: AIR DUMP BUTTON WILL ONLY WORK WITH THE LEVELING SYSTEM ON AND THE PARK BRAKE SET.

MANUAL OPERATION

1. TURN IGNITION SWITCH TO THE "ACC" OR "ON" POSITION. ENGINE MUST BE OFF TO LEVEL COACH. TRANSMISSION SHIFT MUST BE IN POSITION FOR PARKING. PARK BRAKE MUST BE SET EITHER MANUALLY OR AUTOMATICALLY. IF "NOT IN PARK/BRAKE" LIGHT IS ON CHECK SHIFT AND BRAKE POSITION.
2. PRESS "HYD". HYDRAULIC OPERATION INDICATOR LIGHT WILL COME ON STEADY.
3. PRESS "DUMP". WAIT UNTIL THE COACH HAS LOWERED COMPLETELY BEFORE LEVELING.

ON THE RIGHT HAND PORTION OF THE TOUCH PANEL NOTE THE OUTLINE OF A COACH AND THE VARIOUS RAISE (UP ARROW) AND THE LOWER (DOWN ARROW) TOUCH BUTTONS.

4. PRESS THE RESPECTIVE RAISE (UP ARROW) BUTTON TO RAISE THE RESPECTIVE SIDE OR END OF THE COACH. A YELLOW LIGHT TO THE FRONT, SIDE OR REAR OF THE COACH OUTLINE INDICATES THAT SIDE OR END IS LOW. THE LOWER (DOWN ARROW) BUTTONS WILL LOWER THE COACH.

NOTE: JACKS WILL ALWAYS WORK IN PAIRS, FRONT, RIGHT SIDE, LEFT SIDE, OR REAR.

ROOM EXTENSION OPERATION

1. TO EXTEND THE ROOM THE PARK BRAKE MUST BE SET, THE LEVELING SYSTEM MUST BE ON AND A JACKS DOWN WARNING LIGHT MUST BE LIT.
2. TO RETRACT THE ROOM THE PARK BRAKE MUST BE SET AND THE LEVELING SYSTEM MUST BE ON.

IMPORTANT: THE COACH MUST BE LEVELED AND STABILIZED BEFORE OPERATING THE ROOM.

TO EXTEND OR RETRACT THE ROOM, PUSH AND HOLD THE ROOM CONTROL SWITCH UNTIL THE ROOM IS COMPLETELY EXTENDED OR RETRACTED.

IMPORTANT: RELEASE THE SWITCH IMMEDIATELY IF EITHER OR BOTH SIDES OF THE ROOM STOP MOVING.