

# HWH COMPUTER-CONTROLLED HYDRAULIC/AIR LEVELING SYSTEM WITH STRAIGHT-ACTING JACKS AND A PHANTOM SUITE GLIDE-OUT


**CAUTION:** READ AND UNDERSTAND ENTIRE OPERATOR'S MANUAL INCLUDING CAUTIONS, BEFORE OPERATING. THIS SHEET IS FOR QUICK REFERENCE ONLY.

## AIR LEVELING

AIR LEVELING WILL OPERATE FASTER IF THE ENGINE IS RUNNING.

1. SET PARK BRAKE.
2. COACH'S TRANSMISSION MUST BE IN THE PROPER POSITION FOR PARKING.
3. PRESS "AIR", INDICATOR LIGHT WILL COME ON STEADY.
4. PRESS "AIR" A SECOND TIME. INDICATOR LIGHT WILL FLASH. THE COACH WILL LEVEL USING THE AIR SUSPENSION.
5. STEADY AIR OPERATION LIGHT INDICATES LEVELING IS COMPLETE.
6. TURN IGNITION TO "OFF". SYSTEM WILL RECHECK LEVEL EVERY 30 MINUTES. PRESSING "OFF" OR RELEASING THE PARK BRAKE, PROVIDED THE IGNITION IS IN THE "ON" POSITION, WILL RETURN SUSPENSION SYSTEM TO THE TRAVEL MODE.

**NOTE:** THE "DUMP" AND "RAISE" BUTTONS WILL WORK WITH THE SYSTEM ON OR OFF PROVIDED THE IGNITION IS ON. THE DUMP OR RAISE FEATURE WILL LATCH IN WHEN THE BUTTON IS RELEASED. THE PANEL MUST BE TURNED OFF OR THE COACH MUST EXCEED 15 MPH BEFORE THE COACH WILL RETURN TO THE CORRECT RIDE HEIGHT IF THE "DUMP" OR "RAISE" BUTTON HAS BEEN USED. SEE OWNER'S MANUAL FOR COMPLETE INSTRUCTIONS.

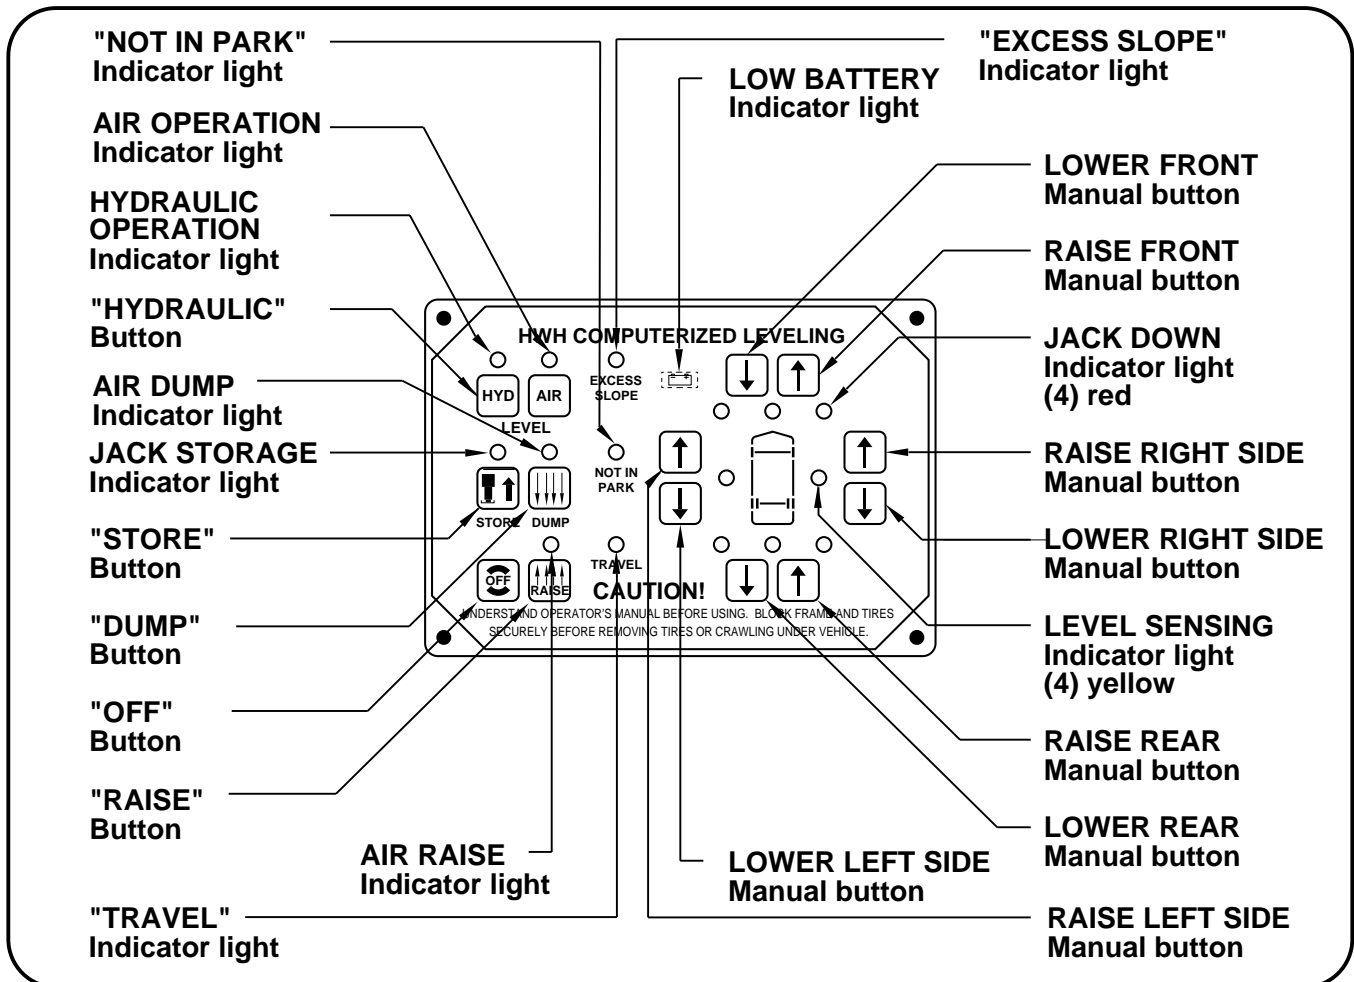

(CONTINUED)

ML13727/MP35.9923  
31JUL97

---

# HWH COMPUTER-CONTROLLED HYDRAULIC/AIR LEVELING SYSTEM WITH STRAIGHT-ACTING JACKS AND A PHANTOM SUITE GLIDE-OUT (CONTINUED)

---

## HYDRAULIC LEVELING

**NOTE: THE GLIDE-OUT WILL NOT EXTEND IF THE JACKS HAVE BEEN EXTENDED.**

1. SET THE PARK BRAKE.
2. COACH TRANSMISSION MUST BE IN THE PROPER POSITION FOR PARKING.
3. COACH ENGINE MUST BE OFF FOR PROPER LEVELING.
4. TURN IGNITION TO THE "ACC" OR "ON" POSITION.
5. PRESS "HYD". THE INDICATOR LIGHT WILL COME ON STEADY.
6. PRESS "HYD" A SECOND TIME. THE INDICATOR LIGHT WILL FLASH. COACH WILL LEVEL THEN THE SYSTEM WILL TURN OFF.
7. TURN IGNITION SWITCH OFF.


## HYDRAULIC STORE

**NOTE: THE JACKS MUST BE RETRACTED BEFORE THE GLIDE-OUT CAN BE RETRACTED.**

1. START THE ENGINE SO AIR PRESSURE CAN BUILD UP.
2. PRESS "HYD" ONCE. THE INDICATOR LIGHT WILL COME ON STEADY.
3. PRESS "STORE". STORE INDICATOR LIGHT WILL FLASH. AFTER A 10 SECOND DELAY, JACKS WILL START RETRACTING.
4. WHEN "TRAVEL" INDICATOR LIGHT IS ON, THE COACH MAY BE MOVED. SYSTEM WILL SHUT ITSELF OFF.

**IMPORTANT: DO NOT INTERRUPT POWER TO THE SYSTEM UNTIL THE SYSTEM AUTOMATICALLY SHUTS ITSELF OFF.**

## PHANTOM SUITE GLIDE-OUT

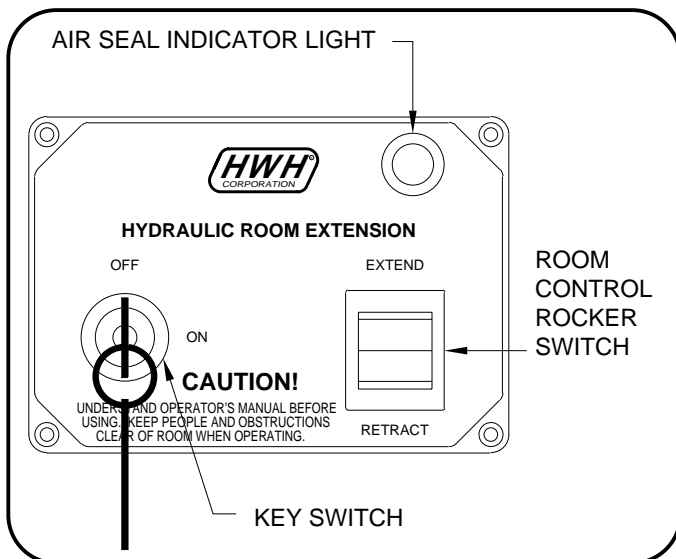

**IMPORTANT: THE COACH MUST BE AT THE PROPER RIDE HEIGHT BEFORE EXTENDING OR RETRACTING THE GLIDE-OUT.**

**THE PARK BRAKE MUST BE SET AND THE IGNITION MUST BE IN THE "ON" OR "ACC" POSITION.**

**IF THE HYDRAULIC LEVELING JACKS ARE EXTENDED, THE GLIDE-OUT WILL NOT EXTEND OR RETRACT.**

1. TURN THE KEY SWITCH ON.
2. WHEN THE AIR SEAL INDICATOR LIGHT COMES ON, THE GLIDE-OUT CAN BE EXTENDED OR RETRACTED.

3. PUSH AND HOLD THE ROOM CONTROL ROCKER SWITCH TO "EXTEND" TO EXTEND THE GLIDE-OUT OR TO "RETRACT" TO RETRACT THE GLIDE-OUT.
4. FIVE SECONDS AFTER THE GLIDE-OUT IS FULLY EXTENDED OR RETRACTED, RELEASE THE ROOM CONTROL ROCKER SWITCH.
5. TURN THE KEY SWITCH TO "OFF".