



ABRIDGED OPERATING INSTRUCTIONS

HWH® Computer-Controlled Hydraulic Leveling System with Automatic Air Dump and Straight-Acting Jacks

CAUTION: Read and understand entire Operator's Manual, including CAUTIONS, before operating. This sheet is for quick reference only.

AUTOMATIC OPERATION

1. Turn the ignition switch to the "ACC" or "ON" position.

Engine must be off to level coach.


Transmission shift must be in the position for parking.

Park brake must be set either manually or automatically.

If "NOT IN PARK/BRAKE" indicator light is on, check shift and brake position.

2. Press the "HYD" button. The HYDRAULIC OPERATION indicator light will come on steady.

3. Press the "HYD" button a second time. The HYDRAULIC OPERATION indicator light will flash. Coach will level then the system will turn off.

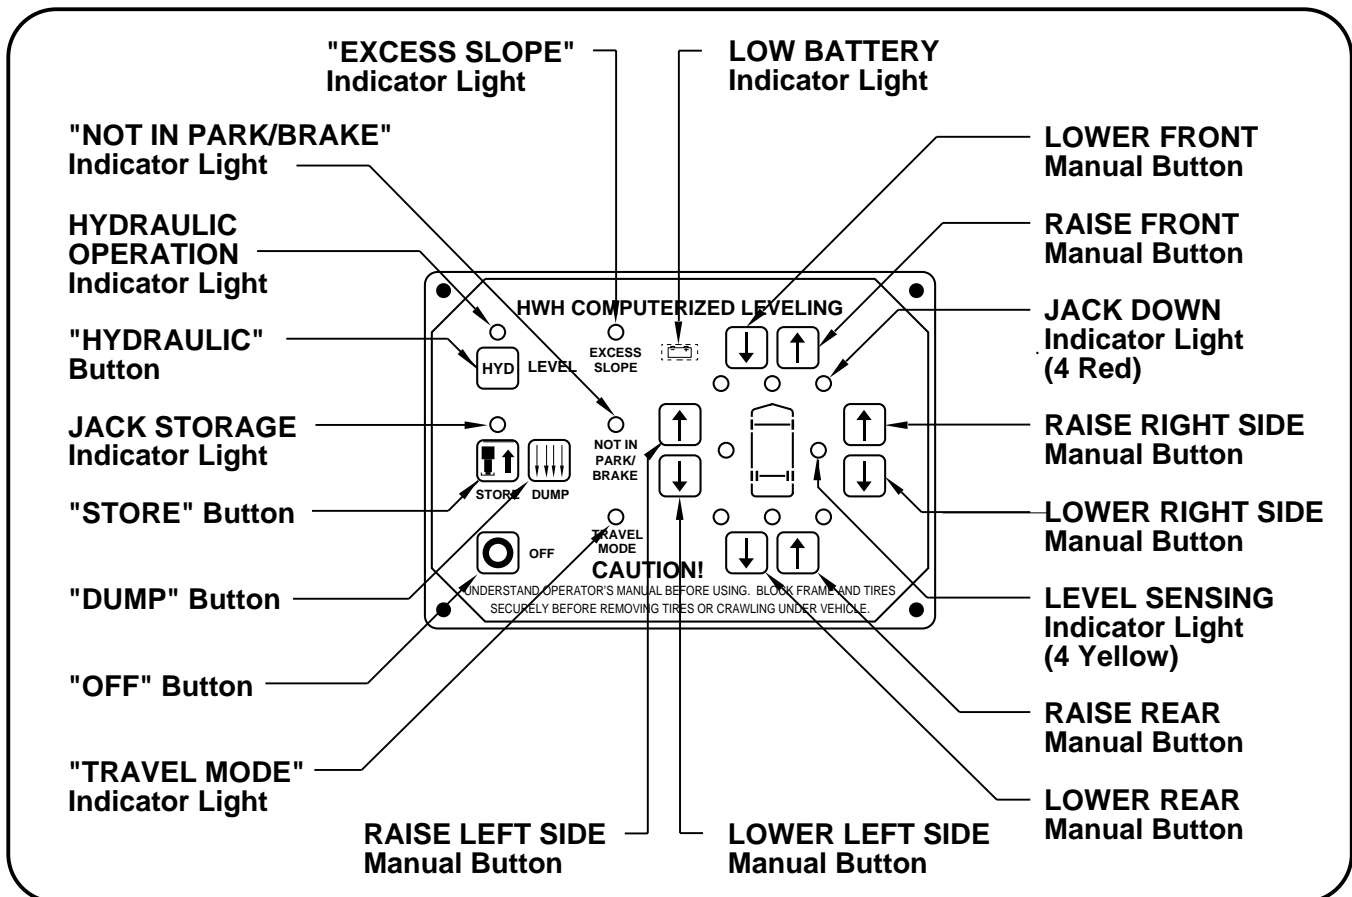

STORE OPERATION

1. Turn the engine on. Store the jacks immediately.
2. Press the "STORE" button. The JACK STORAGE indicator light will flash. Jacks will retract.
3. When the "TRAVEL MODE" indicator light is on and the jacks are fully retracted with the vehicle at the proper ride height, the coach may be moved.

System will shut itself off.

IMPORTANT: Do not interrupt power to the system until the system automatically shuts itself off.

MANUAL OPERATION

1. Turn the ignition switch to the "ACC" or "ON" position.

Engine must be off to level coach.

Transmission shift must be in the position for parking.

Park brake must be set either manually or automatically.

If "NOT IN PARK/BRAKE" light is on, check shift and brake position.
2. Press the "HYD" button. The HYDRAULIC OPERATION indicator light will come on steady.
3. Press the "DUMP" button. Continue holding the button until the air is dumped from the system.
4. On the right hand portion of the HWH Touch Panel, note the outline of a coach and the various RAISE (Up Arrows) (Extend Jacks - raise the coach) and LOWER (Down Arrows) (Retract Jacks - lower the coach) touch buttons.

Press the respective RAISE (Up Arrow) button to raise the respective side or end of the coach. A yellow level light to the front, side or rear of the coach outline indicates that side or end is low. When all of the yellow level lights are out, the coach is level.

The LOWER (Down Arrow) buttons will lower the coach.

NOTE: Jacks will always work in pairs. Front end (right front and left front jacks), right side (right front and right rear jacks), left side (left front and left rear jacks) or rear end (left rear and right rear jacks). Always level the vehicle side to side first if necessary.

ROOM EXTENSIONS

IMPORTANT: If the vehicle is equipped with a room extension system, read the Owner's Manual for instructions on using and operating the room extension system.