



# ABRIDGED OPERATING INSTRUCTIONS

## HWH® Computer-Controlled Hydraulic Leveling System with Straight-Acting Jacks

**CAUTION:** Read and understand entire Operator's Manual, including CAUTIONS, before operating. This sheet is for quick reference only.

### AUTOMATIC OPERATION

**NOTE:** If the vehicle is equipped with a remote AUTO LEVEL rocker switch, the Leveling System Touch Panel does not have to be used when automatically leveling the vehicle.

Turn ignition switch to "ACC" or "ON" position. Transmission shift must be in the position for parking. Park brake must be set either manually or automatically. If "NOT IN PARK/BRAKE" light is on, check shift and brake positions.


### OPTIONAL AUTO LEVEL / STORE ROCKER SWITCH

Press the "AUTO LEVEL" rocker switch to auto level. The light on the switch will flash. The coach will level. The switch light will turn off when leveling is complete.

### LEVELING SYSTEM TOUCH PANEL

Press "AUTO LEVEL" one time. The AUTO LEVEL indicator light will flash. The coach will level then the AUTO LEVEL INDICATOR light will turn off. After the AUTO LEVEL light turns off, one or two yellow LEVEL lights may turn on. See the operator's manual for a detailed explanation.

**IMPORTANT:** DURING THE AUTOMATIC LEVELING PROCEDURE, PUSHING THE ROCKER SWITCH TO AUTO LEVEL OR STORE, OR ON THE TOUCH PANEL, PUSHING THE AUTO LEVEL, STORE OR EMERGENCY STOP BUTTON WILL STOP THE AUTOMATIC LEVELING FUNCTION.

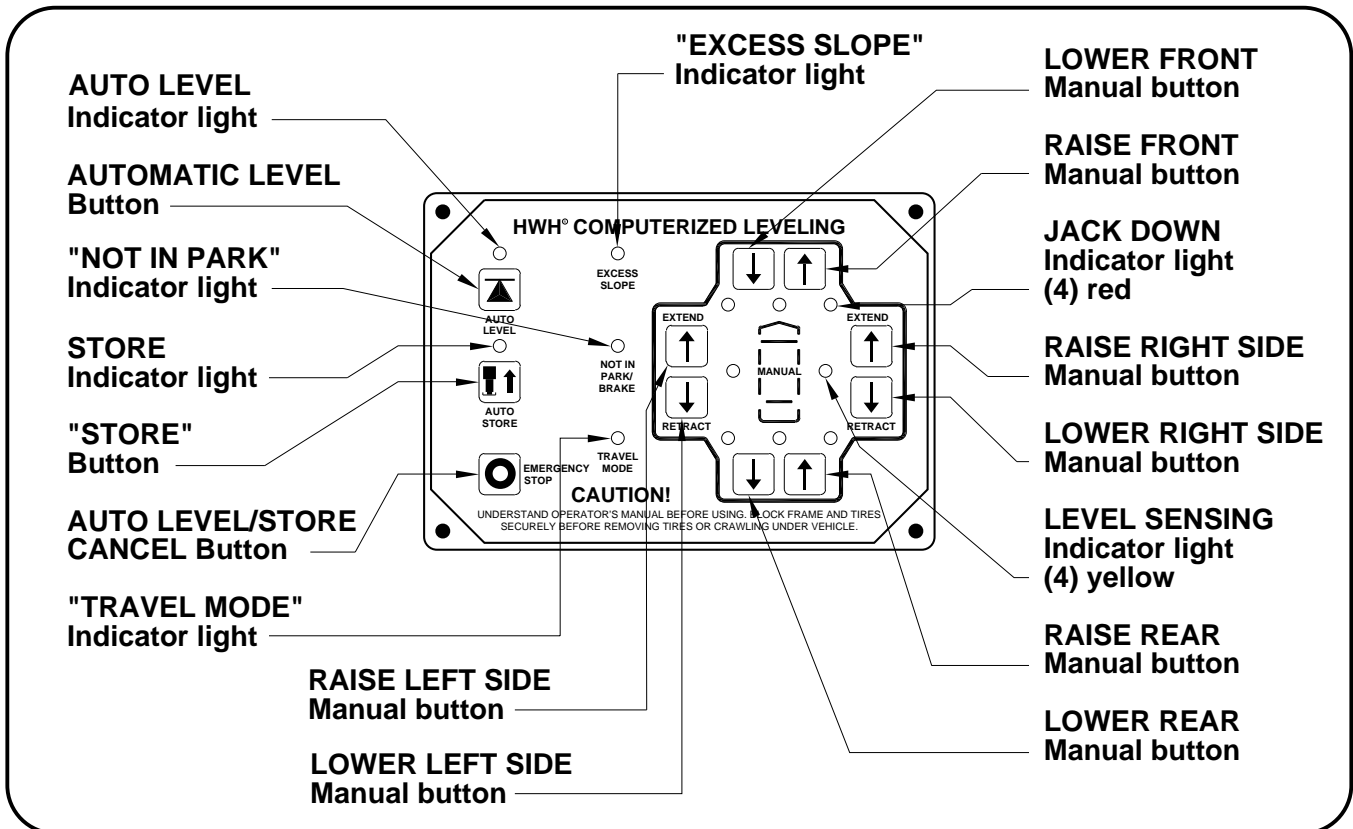

---

# HWH COMPUTER-CONTROLLED HYDRAULIC LEVELING SYSTEM WITH STRAIGHT-ACTING JACKS

---

## STORE OPERATIONS

TURN THE ENGINE ON OR PLACE THE IGNITION IN THE "ON" OR "ACC" POSITION.

### OPTIONAL AUTO LEVEL / STORE ROCKER SWITCH

PUSH THE ROCKER SWITCH TO STORE. THE JACKS WILL START TO RETRACT. WHEN THE MASTER JACKS DOWN WARNING LIGHT AND BUZZER ARE OFF, THE VEHICLE CAN BE MOVED IF THE JACKS ARE IN THE FULLY RETRACTED POSITION.

### LEVELING SYSTEM TOUCH PANEL

1. PUSH THE "AUTO STORE" BUTTON. THE LIGHT ABOVE THE "AUTO STORE" BUTTON WILL FLASH. THE JACKS WILL START TO RETRACT.
2. WHEN THE "TRAVEL MODE" LIGHT IS ON AND THE JACKS ARE FULLY RETRACTED, THE COACH MAY BE MOVED. THE SYSTEM WILL SHUT ITSELF OFF.

**IMPORTANT: DO NOT INTERRUPT POWER TO THE SYSTEM UNTIL THE SYSTEM AUTOMATICALLY SHUTS ITSELF OFF. DO NOT PUSH THE AUTO LEVEL / STORE ROCKER SWITCH OR THE AUTO LEVEL, STORE OR EMERGENCY STOP BUTTON ON THE TOUCH PANEL.**

## MANUAL OPERATION

1. TURN THE IGNITION SWITCH TO THE "ACC" OR "ON" POSITION. THE TRANSMISSION SHIFT MUST BE IN IT'S POSITION FOR PARKING. THE PARK BRAKE MUST BE SET EITHER MANUALLY OR AUTOMATICALLY. IF THE "NOT IN PARK/BRAKE" LIGHT IS ON, CHECK SHIFT AND BRAKE POSITIONS.

**NOTE: THE MANUAL "EXTEND" AND "RETRACT" BUTTONS ON THE TOUCH PANEL WILL FUNCTION WHEN EVER THE IGNITION IS IN THE "ON" OR "ACC" POSITION IF THE PARK BRAKE IS SET.**

ON THE RIGHT HAND PORTION OF THE TOUCH PANEL NOTE THE OUTLINE OF A COACH AND VARIOUS "EXTEND" (UP ARROW) AND "RETRACT" (DOWN ARROW) TOUCH BUTTONS.

2. PRESS THE RESPECTIVE "EXTEND" (UP ARROW) BUTTON TO RAISE THE RESPECTIVE SIDE OR END OF THE OF THE COACH. A YELLOW LIGHT TO THE FRONT, SIDE OR REAR OF THE COACH OUTLINE INDICATES THAT SIDE OR END IS LOW. THE "RETRACT" (DOWN ARROW) BUTTONS WILL LOWER THE COACH.

**NOTE: JACKS WILL ALWAYS WORK IN PAIRS, FRONT, RIGHT SIDE, LEFT SIDE, OR REAR. ALWAYS LEVEL THE VEHICLE SIDE TO SIDE FIRST IF NEEDED.**

## ROOM EXTENSIONS

**IMPORTANT: IF THE VEHICLE IS EQUIPPED WITH A ROOM EXTENSION, READ THE OWNER'S MANUAL FOR INSTRUCTIONS ON USING AND OPERATING THE ROOM EXTENSIONS.**