



ABRIDGED OPERATING INSTRUCTIONS

HWH® Computer-Controlled Hydraulic Leveling System with Straight-Acting Jacks

CAUTION: Read and understand entire Operator's Manual, including CAUTIONS, before operating. This sheet is for quick reference only.

UNHITCHING / LEVELING THE TRAILER

HWH Master Power Switch must be on to perform Auto Leveling, Auto Store or any manual leveling functions.

1. Manual UP (raise trailer, extend jacks) and DOWN (lower trailer, retract jacks) arrow buttons work any time the HWH Master Power Switch is on except if the "AUTO LEVEL" or "AUTO STORE" light is flashing. All manual buttons operate (2) jacks at a time - both front - both rear - left side or right side.
2. Use the front UP arrow to extend the front jacks and unhitch the trailer.
3. The front jacks must be firmly on the ground supporting the weight of the trailer before the "AUTO LEVEL" button will function.
4. Push the "AUTO LEVEL" button one time to start the auto level procedure. The AUTO LEVEL light will flash. The system will level and stabilize the trailer, then the AUTO LEVEL light will shut off.
5. Turn the HWH Master Power Switch off.

STORING THE JACKS

DO NOT connect the tow vehicle air to the trailer until the trailer jacks are stored.

1. Use the rear DOWN arrow to remove the weight of the trailer from the rear jacks.
2. Use the front DOWN arrow to retract the front jacks and hitch the trailer to the tow vehicle.
3. The front jacks must be off the ground before the "AUTO STORE" button will function.
4. Push the "AUTO STORE" button to start the automatic store procedure. The AUTO STORE light will flash. The pump will shut off after the jacks are fully retracted. The AUTO STORE light will shut off.

IMPORTANT: THE HWH MASTER POWER SWITCH SHOULD BE OFF ANY TIME THE TOUCH PANEL DOES NOT NEED TO BE ACTIVE, WHETHER THE JACKS ARE EXTENDED OR RETRACTED.

