

HWH® EMERGENCY JACK SYSTEM

WARNING: BLOCK FRAME AND TIRES SECURELY BEFORE REMOVING TIRES OR CRAWLING UNDER VEHICLE. KEEP PEOPLE AND OBJECTS CLEAR OF VEHICLE WHEN EXTENDING OR RETRACTING JACKS

EMERGENCY JACK SYSTEM CONTROL PENDANT IS LOCATED IN THE PASSENGER SIDE FRONT COMPARTMENT IN A LOCKED CABINET AT THE TOP OF THE COMPARTMENT.

1. THE EMERGENCY JACK SYSTEM MASTER POWER SWITCH IS IN THE REAR ENGINE COMPARTMENT ON THE PASSENGER SIDE. TURN THE SWITCH TO ON.

WARNING: THE EMERGENCY JACK SYSTEM SWITCH MUST BE OFF WHEN THE VEHICLE IS IN MOTION.

2. REMOVE THE CONTROL PENDANT FROM THE CABINET AND EXTEND A PAIR OF JACKS AS NEEDED TO LIFT AN END OR SIDE OF THE VEHICLE AS NEEDED.


3. PUSH THE APPROPRIATE TOGGLE SWITCH TO "EXTEND" TO EXTEND JACKS AND RAISE THE VEHICLE. WHEN POSSIBLE IT IS PREFERRED TO USE THE "FRONT" OR "REAR" TOGGLE SWITCHES TO RAISE THE VEHICLE.

NOTE: PUSHING A TOGGLE SWITCH TO "EXTEND" OR "RETRACT" WILL EXTEND OR RETRACT 2 JACKS AT A TIME, BOTH FRONT JACKS, BOTH REAR JACKS, THE LEFT FRONT AND LEFT REAR JACKS OR THE RIGHT FRONT AND RIGHT REAR JACKS.

4. PUSH THE APPROPRIATE TOGGLE SWITCH TO "RETRACT" TO RETRACT JACKS AND LOWER THE VEHICLE.

5. WHEN THE JACKS ARE FULLY RETRACTED OR WHEN THE SYSTEM IS NOT IN USE, TURN THE JACK SYSTEM MASTER POWER SWITCH TO "OFF".

WARNING: VISUALLY CHECK THAT ALL JACKS ARE FULLY RETRACTED BEFORE TRAVELING.

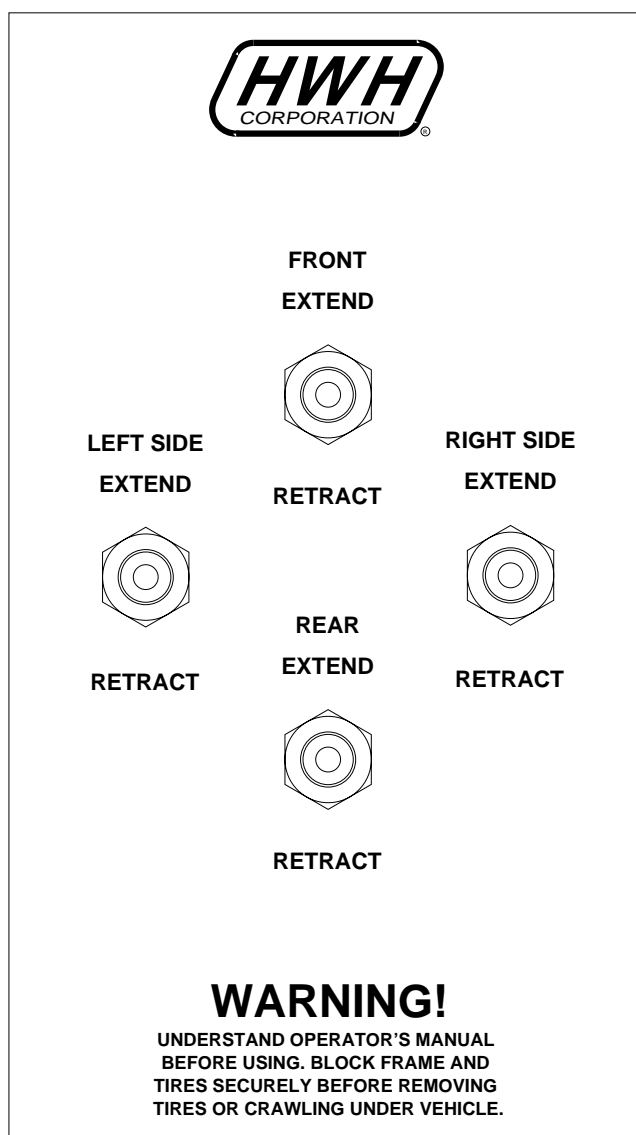

(CONTINUED)

ML46130/MP35.9953
22FEB10

HWH® EMERGENCY JACK SYSTEM

MANUAL JACK OPERATION WITH HAND PUMP

WARNING: BLOCK FRAME AND TIRES SECURELY BEFORE REMOVING TIRES OR CRAWLING UNDER VEHICLE. KEEP PEOPLE AND OBJECTS CLEAR OF VEHICLE WHEN EXTENDING OR RETRACTING JACKS

CAUTION: NEVER EXTEND ONE JACK AT A TIME IN MANUAL OPERATION. ALWAYS EXTEND TWO JACKS AT A TIME IN MANUAL OPERATION.

HAND PUMP HANDLE IS IN THE JACK CONTROL PENDANT CABINET.

THE HAND PUMP AND VALVE ARRANGEMENT IS BELOW A REMOVABLE HATCH IN THE ISLE FLOOR BETWEEN SEATS 37 - 40. A 6mm HEX WRENCH IS NEEDED TO REMOVE THE HATCH.

TO EXTEND JACKS OPEN THE APPROPRIATE PAIR OF EXTEND VALVES. INSERT THE HANDLE INTO THE HAND PUMP. MOVE THE HANDLE UP AND DOWN TO OPERATE THE PUMP. THE PUMP WILL PUMP HARD AT FIRST. THE PUMP WILL PUMP EASIER WHEN THE JACKS HAVE STARTED TO LIFT. PUMPING WILL AGAIN GET MORE DIFFICULT AS THE VEHICLE IS LIFTED. CLOSE THE EXTEND VALVES WHEN YOU ARE FINISHED PUMPING.

TO RETRACT JACKS, THE EXTEND VALVES MUST BE CLOSED. OPEN THE APPROPRIATE RETRACT VALVES AND PUMP THE HAND PUMP UNTIL ALL JACKS ARE COMPLETELY RETRACTED.

NOTE: IT IS BEST TO OPEN BOTH RETRACT VALVES AT THE SAME TIME. THE VEHICLE WILL START TO LOWER AS SOON AS A RETRACT VALVE IS OPENED.

WARNING: VISUALLY CHECK THAT ALL JACKS ARE COMPLETELY RETRACTED BEFORE TRAVELING.

