

HYDRAULIC LINE CONNECTION DIAGRAMS

HWH° SPACEMAKER° SLIDE-OUT SYSTEMS


FEATURING: Dual-Cylinder "Rail" Slide-Out System

HWH CORPORATION

(On I-80, Exit 267 South) 2096 Moscow Road | Moscow, Iowa 52760 Ph: 800/321-3494 (or) 563/724-3396 | Fax: 563/724-3408 www.hwh.com


> ML50389/MP04.9800C 20JUN12

GENERIC HYDRAULIC LINE CONNECTION DIAGRAM DUAL CYLINDER UNDER FLOOR "RAIL" ROOM EXTENSION (WITH SYNCHRONIZING CYLINDER)

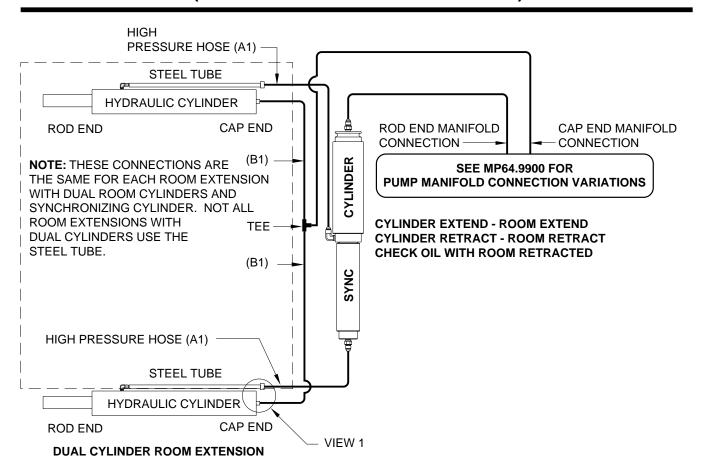

IMPORTANT: THE LINES (B1) BETWEEN THE CAP END OF THE HYDRAULIC CYLINDERS AND THE TEE MUST BE THE SAME LENGTH AND DIAMETER.


THE LINES (A1) BETWEEN THE ROD END OF THE HYDRAULIC CYLINDERS AND THE SYNCHRONIZING CYLINDER MUST BE THE SAME LENGTH AND DIAMETER. THE A1 LINES MUST BE HIGH PRESSURE HOSE.

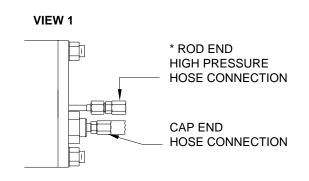

HOSE CONNECTION AT REAR OF ROOM EXTENSION TUBE

* **IMPORTANT:** THE STEEL TUBE IS ALWAYS THE ROD END CONNECTION. SOMETIMES THE STEEL TUBE IS BELOW THE CAP END CONNECTION.

HYDRAULIC LINE CONNECTION DIAGRAM SLIDE-OUT LINE CONNECTIONS AT THE MANIFOLD ALL HWH SLIDE-OUT MECHANISMS

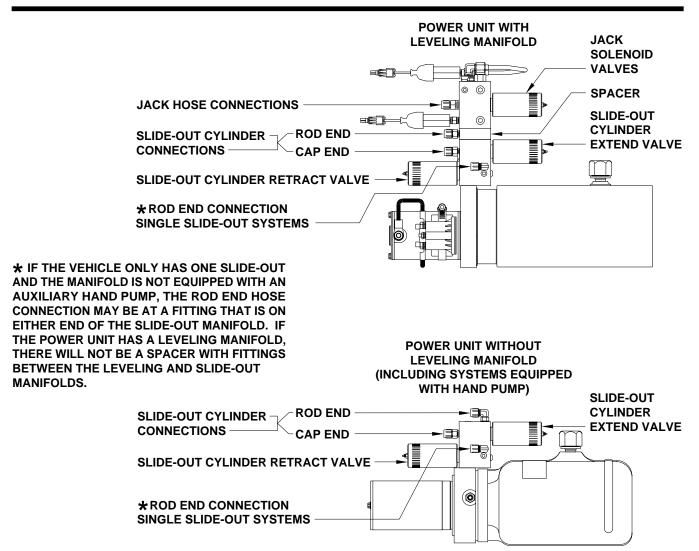


HOSE CONNECTIONS AT THE MANIFOLD ARE CRITICAL. IMPROPER HOSE ROUTING WILL CAUSE INCORRECT SLIDE-OUT FUNCTION AND CAN CAUSE SEVERE DAMAGE TO SLIDE-OUT CYLINDERS OR SOLENOID VALVES. IF A ROD AND CAP END HOSE ARE REVERSED FOR A SLIDE-OUT, THE SLIDE-OUT CYLINDER(S) WILL EXTEND BUT NOT RETRACT.

THE ROD AND CAP HOSES MUST GO TO THE CORRECT FITTINGS IN LINE WITH THE CORRECT EXTEND AND RETRACT VALVES FOR THE SLIDE-OUT. IF THE ROD END OR CAP END HOSES FOR TWO SLIDE-OUTS ARE SWAPPED, EXTREME PRESSURE WILL DAMAGE THE SOLENOID VALVES OR SLIDE-OUT CYLINDERS.


CONNECTION INFORMATION ON THIS PAGE IS THE SAME FOR SYSTEMS EQUIPPED WITH AUXILIARY HAND PUMPS OR REMOTE SLIDE-OUT MANIFOLDS.

TOP VIEW OF 4 SLIDE-OUT MANIFOLD

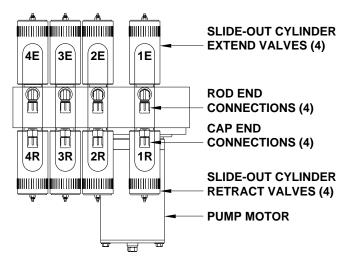

MP64.9900 22JUN12

HYDRAULIC LINE CONNECTION DIAGRAM GENERIC DIAGRAM FOR DUAL CYLINDER SLIDE-OUT

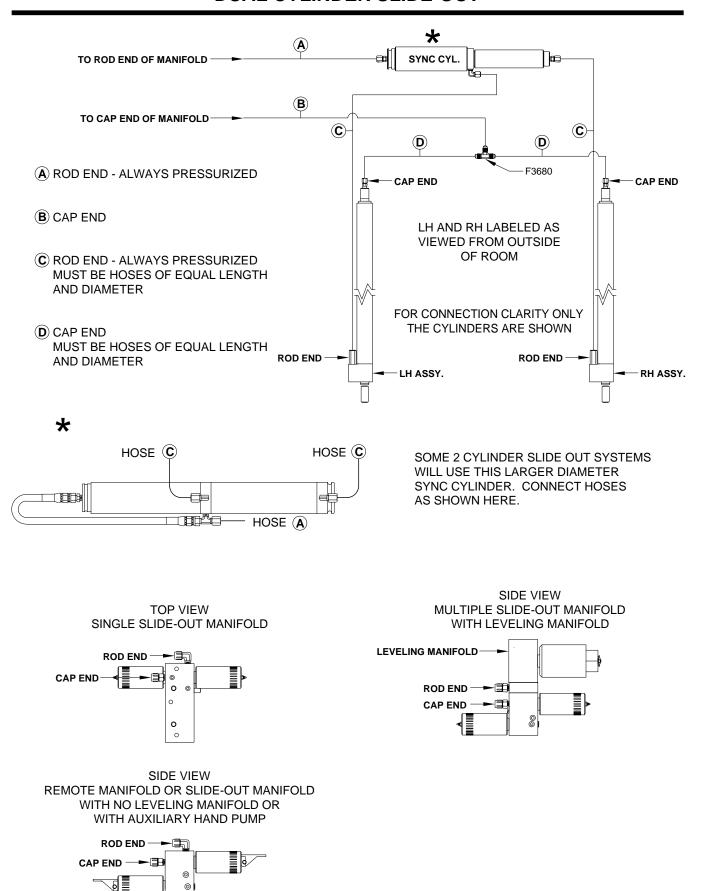

MP64.9990A 04JUN18