
CONTROL IDENTIFICATION

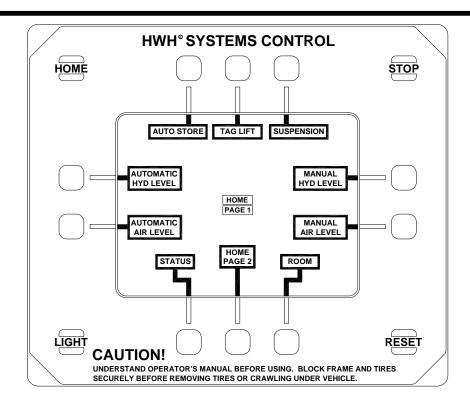

HOME PAGE

NOTE: See individual function pages in the OPERATING PROCEDURES section of this manual for detailed information about specific screen buttons.

PANEL BUTTONS

- **"HOME" BUTTON:** Pushing the "HOME" button at any time will return the control panel to HOME PAGE 1 EXCEPT when the system is actively leveling the vehicle in an automatic mode.
- "LIGHT" BUTTON: Pushing the "LIGHT" button will turn the back light off. The panel will appear dark but the system will remain on. Push the "LIGHT" button to turn the back light on.
- "STOP" BUTTON: Pushing the "STOP" button will turn the system off halting any active function including ACTIVE AIR SUSPENSION. If the ignition is on, the Master Warning Light will come on. IT IS NOT RECOMMENDED TO PUSH THE "STOP" BUTTON WHEN TRAVELING.
- "RESET" BUTTON: This button will reset the SYSTEM CONTROL PANEL if the panel ceases to function due to a malfunction. The "RESET" button will also reactivate the CONTROL PANEL if the "STOP" button is pushed at ANY time. The ignition key must be on for the "RESET" button to work.

SCREEN BUTTONS AND LIGHTS

- "AUTOMATIC HYD LEVEL" BUTTON: This button will start the automatic hydraulic leveling procedure and bring up the AUTOMATIC HYD LEVEL screen.
- "AUTOMATIC AIR LEVEL" BUTTON: This button will start the automatic air leveling procedure and bring up the AUTOMATIC AIR LEVEL screen.
- "MANUAL HYD LEVEL" BUTTON: This button will put the system in the manual hydraulic leveling mode and bring up the HYD LEVEL page for manual hydraulic leveling control.
- "MANUAL AIR LEVEL" BUTTON: This button will put the system in the manual air leveling mode and bring up the AIR LEVEL page for manual air leveling control.
- "AUTO STORE" BUTTON: This button will retract the jacks when manual or automatic hydraulic leveling has been used. It also puts the system in the Travel Mode. If Manual or Automatic Air Leveling was used, this button will put the system in the Travel Mode. No matter what type of leveling was done, when the "AUTO STORE" button is pushed the first thing that happens is air is pumped into all the suspension air bags for 10 seconds before the jacks are retracted and/or the system returns to the Travel Mode.