


CONTROL IDENTIFICATION

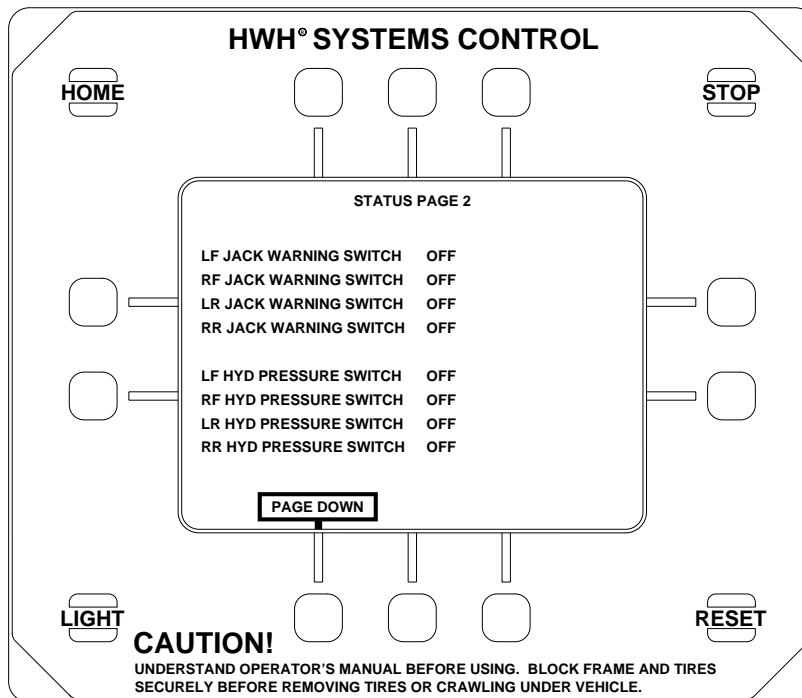

STATUS PAGE 2

NOTE: This "STATUS PAGE" is specific to HWH hydraulic leveling systems ONLY.

SCREEN BUTTONS

"PAGE DOWN" BUTTON: Use this button to switch from status screen to status screen.

SCREEN TEXT

"LF JACK WARNING SWITCH"

"RF JACK WARNING SWITCH"

"LR JACK WARNING SWITCH"

"RR JACK WARNING SWITCH"

OFF - Jack is "FULLY" retracted

ON - Jack is extended

"LF HYD PRESSURE SWITCH"

"RF HYD PRESSURE SWITCH"

"LR HYD PRESSURE SWITCH"

"RR HYD PRESSURE SWITCH"

OFF - Jack has no load on it, It is not supporting weight.

ON - Jack has load on it, it is supporting weight.