


CONTROL IDENTIFICATION

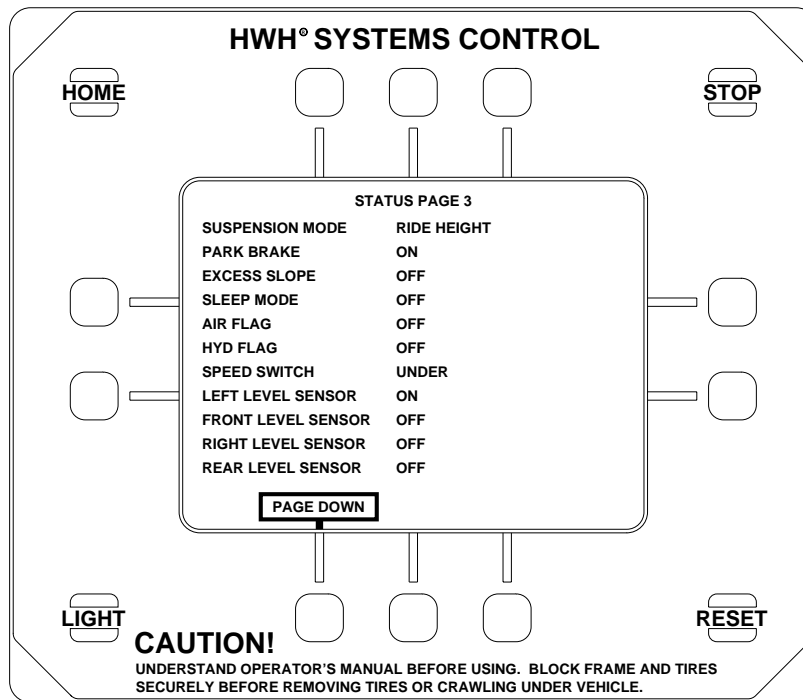

STATUS PAGE 3

SCREEN BUTTONS

"PAGE DOWN" BUTTON: Use this button to switch from status screen to status screen.

SCREEN TEXT

"SUSPENSION MODE"

RIDE HEIGHT - System is in Active Air.

OFF - System is not in Active Air.

"PARK BRAKE"

"EXCESS SLOPE"

"SLEEP MODE" - Is in sleep mode air leveling.

"AIR FLAG" - Has been leveled using air.

"HYD FLAG" - Has been leveled using hydraulics.

OFF -

ON -

"SPEED SWITCH"

UNDER - Vehicle is under speed. System will not enter "FLY" mode.

OVER - Vehicle is over speed. System will not enter "FLY" mode.

"LEFT LEVEL SENSOR"

"FRONT LEVEL SENSOR"

"RIGHT LEVEL SENSOR"

"REAR LEVEL SENSOR"

OFF -

ON -