


CONTROL IDENTIFICATION

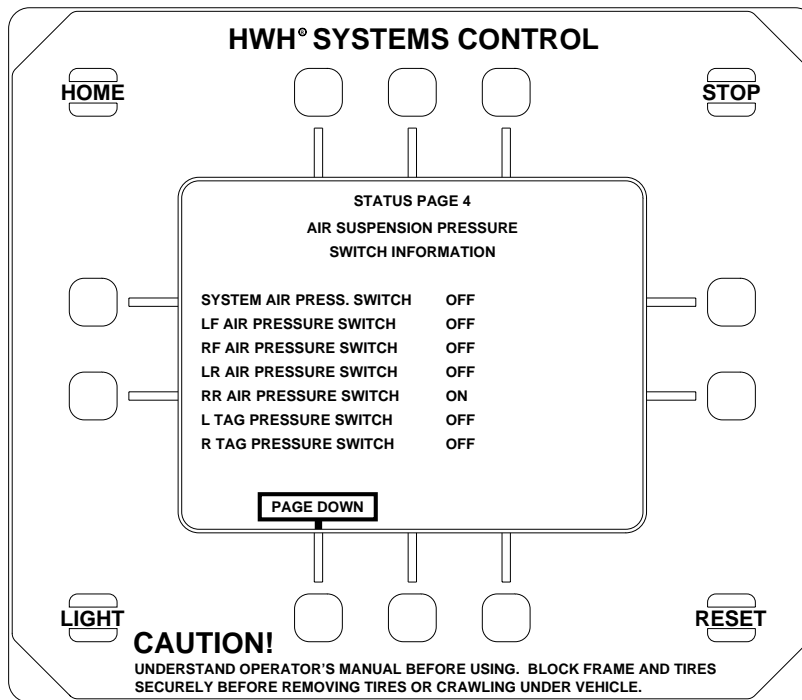

STATUS PAGE 4

SCREEN BUTTONS

"PAGE DOWN" BUTTON: Use this button to switch from status screen to status screen.

SCREEN TEXT

"SYSTEM AIR PRESS. SWITCH"

"LF AIR PRESSURE SWITCH"

"RF AIR PRESSURE SWITCH"

"LR AIR PRESSURE SWITCH"

"RR AIR PRESSURE SWITCH"

"L TAG PRESSURE SWITCH"

"R TAG PRESSURE SWITCH"

OFF - Air bag does not have sufficient air pressure.

ON - Air bag does have sufficient air pressure.