


NOTE: PINS NOT NOTED ARE UNUSED

- PIN
1. BLK(W8600) PUMP CONTROL
  2. BLK(W7698) WARN/BUZZER CONTROL
  3. BLK(W3000) RR WARNING SWITCH
  4. BLK(W4400) LR SOLENOID VALVE
  5. BLK(W3400) RR SOLENOID VALVE
  6. BLK(W4000) LR WARNING SWITCH
  7. WHT(W6230) GROUND
  8. RED(W6100) BATTERY
  9. RED(W6100) BATTERY
  10. BLK(W8101) 50 LB PRESS SWITCH
  11. BLK(W9000) PARK BRAKE
  12. RED(W6110) IGNITION
  13. RED(W6120) ACCESSORY

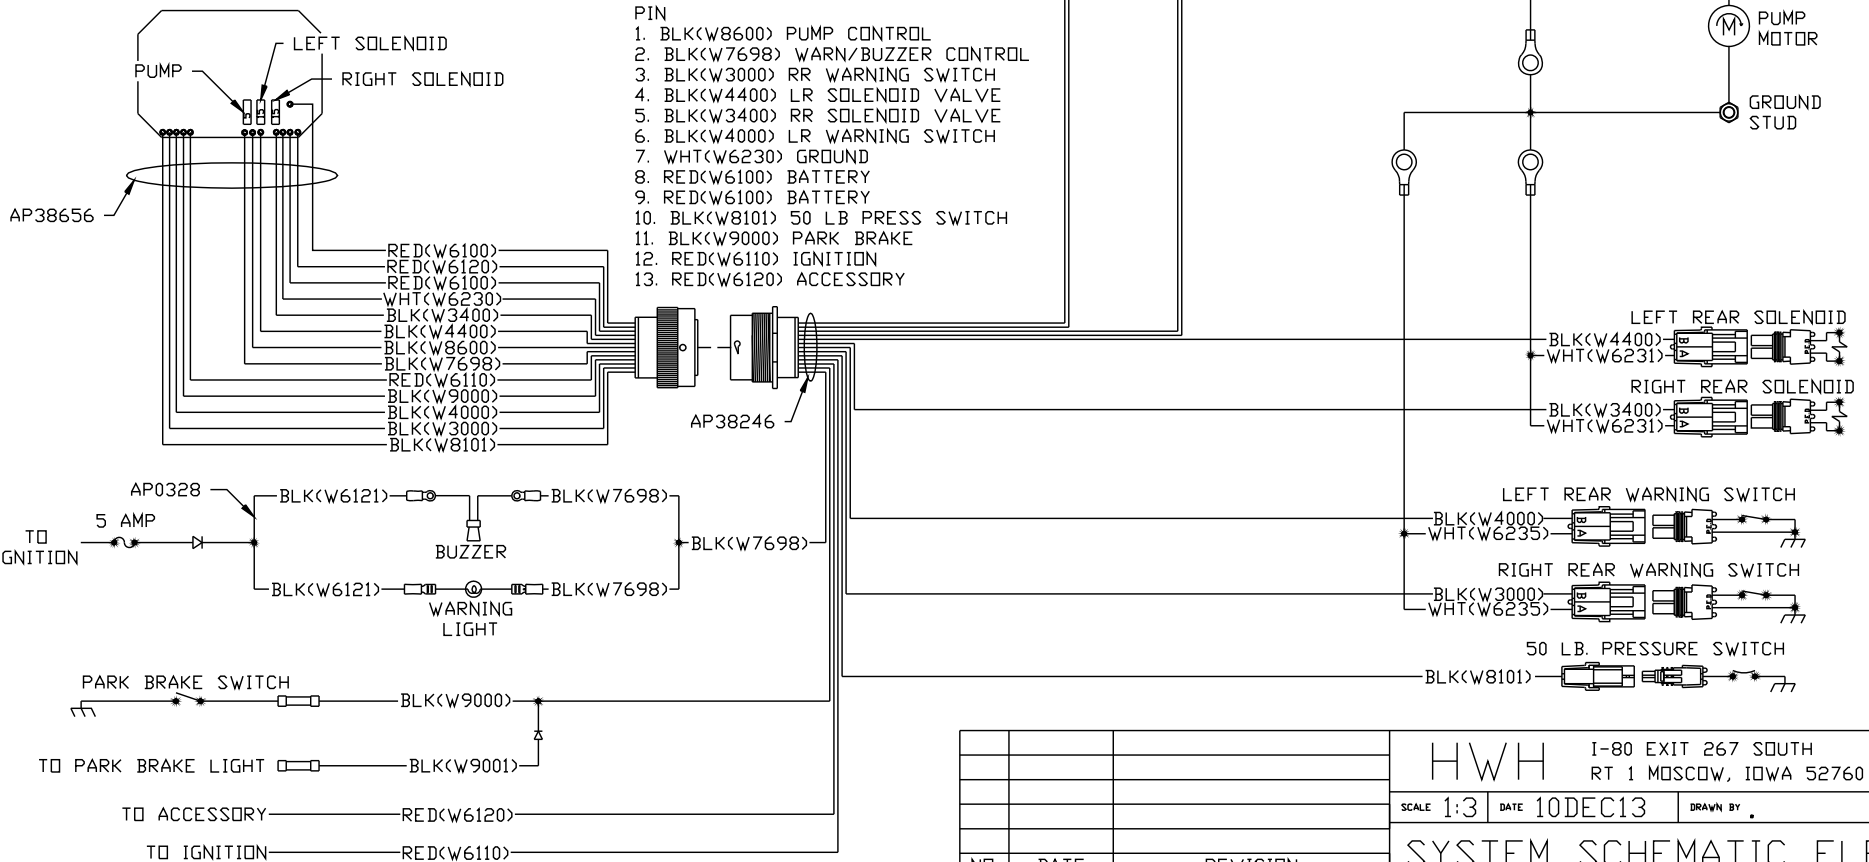

NOTE: INSTALLATION MUST CONFORM TO GOOD SHOP PRACTICES, SAE STANDARDS, RVIA STANDARDS, AND OTHER APPLICABLE STANDARDS.

		HWH		I-80 EXIT 267 SOUTH RT 1 MOSCOW, IOWA 52760	
		SCALE 1:3	DATE 10DEC13	DRAWN BY .	
SYSTEM SCHEMATIC ELEC					
NO.	DATE	REVISION			
THE INFORMATION DISCLOSED ON THIS DRAWING IS CONFIDENTIAL AND MUST NOT BE DISCLOSED OR USED IN ANY MANNER WHICH WILL BE DETRIMENTAL TO THE HWH CORPORATION				DRAWING NUMBER MP909730	