


HWH COMPUTER-CONTROLLED AIR LEVELING SYSTEM

CAUTION: READ AND UNDERSTAND ENTIRE OPERATOR'S MANUAL INCLUDING CAUTIONS, BEFORE OPERATING. THIS SHEET IS FOR QUICK REFERENCE ONLY.

AIR LEVELING

AIR LEVELING WILL OPERATE FASTER IF THE ENGINE IS RUNNING

1. SET PARK BRAKE.
2. COACH'S TRANSMISSION MUST BE IN THE PROPER POSITION FOR PARKING.
3. PRESS "AIR", INDICATOR LIGHT WILL COME ON STEADY.
4. PRESS "AIR" A SECOND TIME. INDICATOR LIGHT WILL FLASH. THE COACH WILL LEVEL USING THE AIR SUSPENSION.
5. STEADY AIR OPERATION LIGHT INDICATES LEVELING IS COMPLETE.
6. TURN IGNITION TO "OFF". SYSTEM WILL RECHECK LEVEL EVERY 30 MINUTES. PRESSING "OFF" OR RELEASING THE PARK BRAKE, PROVIDED THE IGNITION IS IN THE "ON" POSITION, WILL RETURN SUSPENSION SYSTEM TO THE TRAVEL MODE.

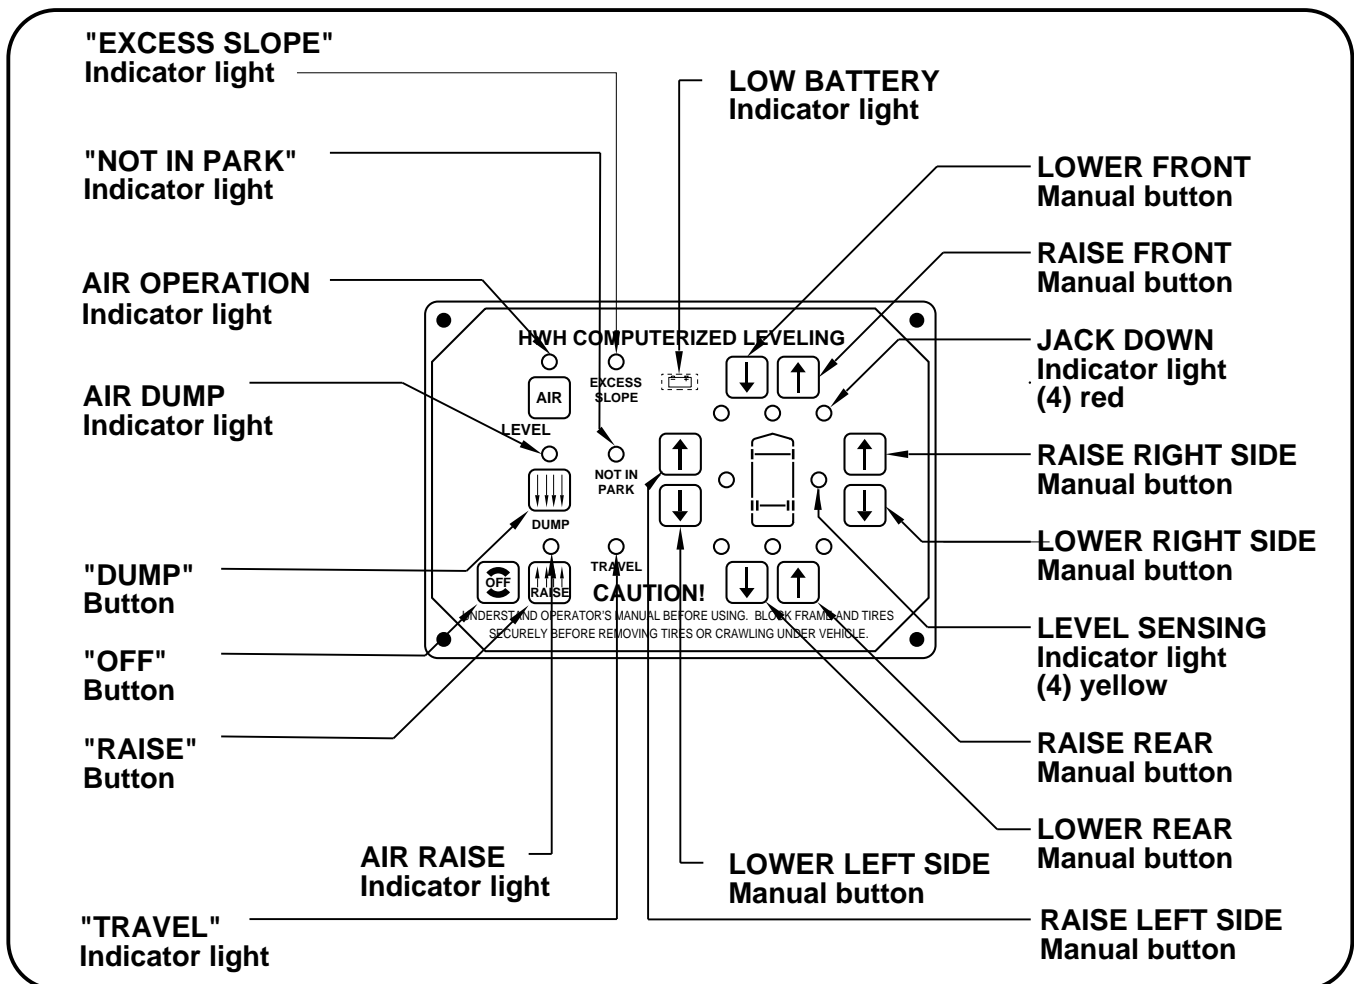

(CONTINUED)

ML20679/MP35.9945
18AUG99

HWH COMPUTER-CONTROLLED AIR LEVELING SYSTEM (CONTINUED)

MANUAL OPERATION

AIR LEVELING WILL OPERATE FASTER IF ENGINE IS RUNNING.

1. SET PARK BRAKE.
2. PLACE COACH'S TRANSMISSION IN THE PROPER POSITION FOR PARKING.
3. AT THIS TIME AIR MAY BE DUMPED OR ADDED TO ALL AIR BAGS BY PRESSING THE "DUMP" OR "RAISE" BUTTONS.
4. PRESS THE "AIR" BUTTON ONCE.

ON THE RIGHT HAND PORTION OF THE TOUCH PANEL NOTE THE OUTLINE OF A COACH AND THE VARIOUS RAISE (UP ARROW) AND THE LOWER (DOWN ARROW) TOUCH BUTTONS.

5. PRESS THE RESPECTIVE RAISE (UP ARROW) BUTTON TO RAISE THE RESPECTIVE SIDE OR END OF THE COACH. A YELLOW LIGHT TO THE FRONT, SIDE OR REAR OF THE COACH OUTLINE INDICATES THAT SIDE OR END IS LOW. THE LOWER (DOWN ARROW) BUTTONS WILL LOWER THE COACH.
6. THE LEVELING SYSTEM WILL TURN ITSELF OFF IN APPROXIMATELY 4 MINUTES IF THE AUTOMATIC SEQUENCE IS NOT USED. IF THE IGNITION KEY IS ON, THE VEHICLE MAY RETURN TO RIDE HEIGHT.

DUMP/RAISE FUNCTION

THE "DUMP" AND "RAISE" BUTTONS WILL WORK AT ANY TIME, WITH IGNITION ON OR OFF OR WITH THE CONTROL PANEL ON OR OFF.

DO NOT OPERATE THE VEHICLE OVER 5 MPH UNLESS THE AIR SUSPENSION IS AT THE PROPER HEIGHT FOR TRAVEL.

TAG AXLE DUMP

IMPORTANT: REFER TO THE VEHICLE MANUFACTURER FOR PROPER USE OF THE TAG DUMP FEATURE.

THE IGNITION MUST BE ON AND THE LEVELING SYSTEM PANEL OFF FOR THE TAG DUMP SWITCH TO WORK.

ROOM EXTENSION

IF THE VEHICLE IS EQUIPPED WITH A ROOM EXTENSION, READ THE OWNERS MANUAL FOR INSTRUCTIONS ON USING AND OPERATING THE ROOM EXTENSION.