


# OPERATING PROCEDURES

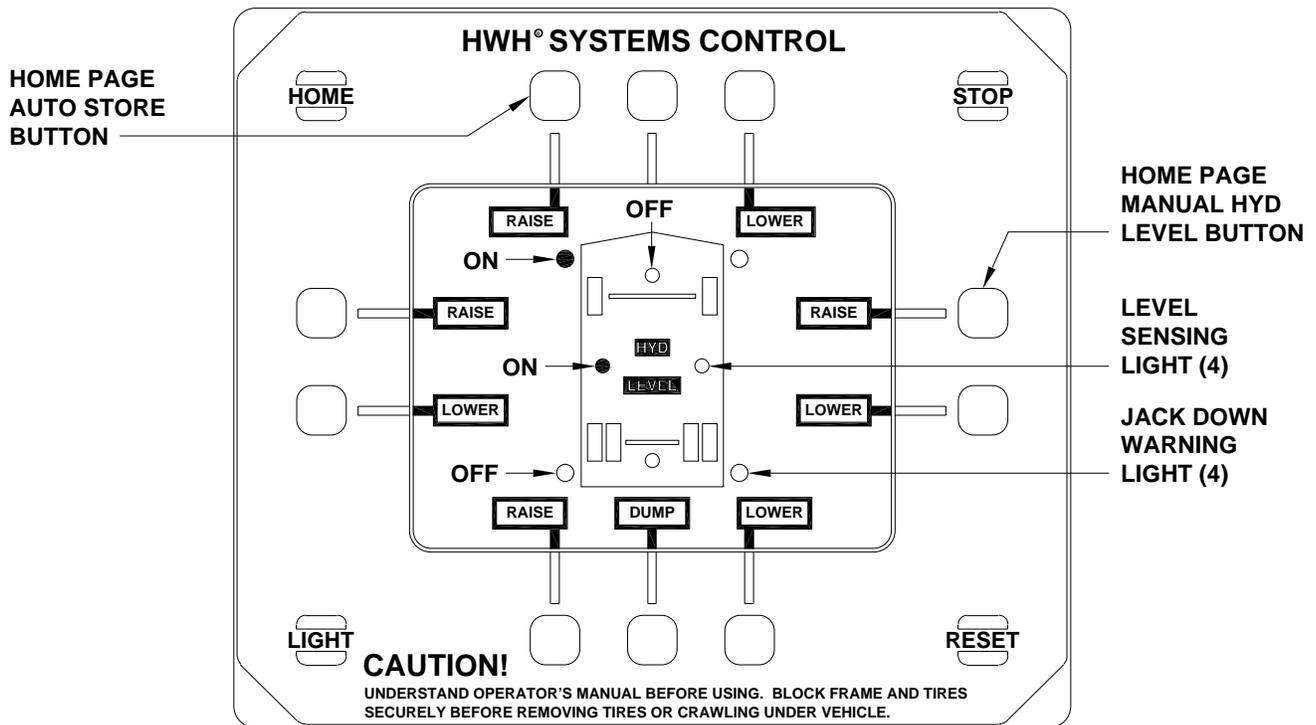

## MANUAL HYDRAULIC LEVELING

**CAUTION: KEEP PEOPLE AND OBJECTS CLEAR OF THE VEHICLE WHILE OPERATING THE HYDRAULIC LEVELING SYSTEM.**

The ignition key must be on and the park brake must be set to use manual hydraulic leveling. If the ignition and/or the park brake are not on, a message will appear on the screen when the "MANUAL HYD LEVEL" button is pushed. Push the "HOME" button and correct the problem before pushing the "MANUAL HYD LEVEL" button again.

**NOTE: Manual leveling and automatic store can only be started when the "HOME" page is being displayed.**

Level the vehicle according to level sensing lights. A lit level sensing light indicates that side, end or corner of the vehicle is low. When all level sensing lights are out the vehicle is level.

The "RAISE" buttons are used to extend the jacks and raise the vehicle. The "LOWER" buttons are used to retract the jacks. Each set of buttons operate a pair of jacks, front, rear, left or right side. The RAISE and LOWER buttons are momentary buttons. The jacks will extend or retract while the buttons are being pushed.

The Jack Down Warning Lights will come on as there respective jack extends approximately 1 inch.

1. Turn the ignition key on and set the park brake.
2. Push the "MANUAL HYD LEVEL" button on the "HOME" page.

3. At this time, the operator may want to check the jacks and place a pad under each jack at this time, if necessary.

4. Push and hold the "DUMP" button until all of the air is exhausted from the vehicle suspension.

5. Push and hold the "RAISE" buttons as necessary to raise the vehicle according to lit LEVEL SENSING lights. If a side LEVEL SENSING light is on, extend that pair of jacks to turn the side light out first before leveling the vehicle from front to rear.

6. Any jack(s) not used for leveling should be extended to the ground to stabilize the vehicle. Use the front and/or rear "RAISE" button to accomplish this. Jacks extended to stabilize the vehicle should lift the vehicle at least 3/4 of an inch.

**IMPORTANT: DO NOT continue to push a "RAISE" button for more than 10 seconds after that pair of jacks are fully extended.**

7. When the leveling and stabilizing procedure is complete, push the "HOME" button and turn the ignition off or proceed with other functions.

**IMPORTANT: Although the jacks can be retracted using the "LOWER" buttons the "AUTO STORE" button on the "HOME" page should be used to retract the jacks. Always use the "AUTO STORE" button when preparing to travel.**