




NOTE: INSTALLATION MUST CONFORM TO GOOD SHOP PRACTICES, SAE STANDARDS, RVIA STANDARDS, AND OTHER APPLICABLE STANDARDS.

MP89372 B 11FEB08

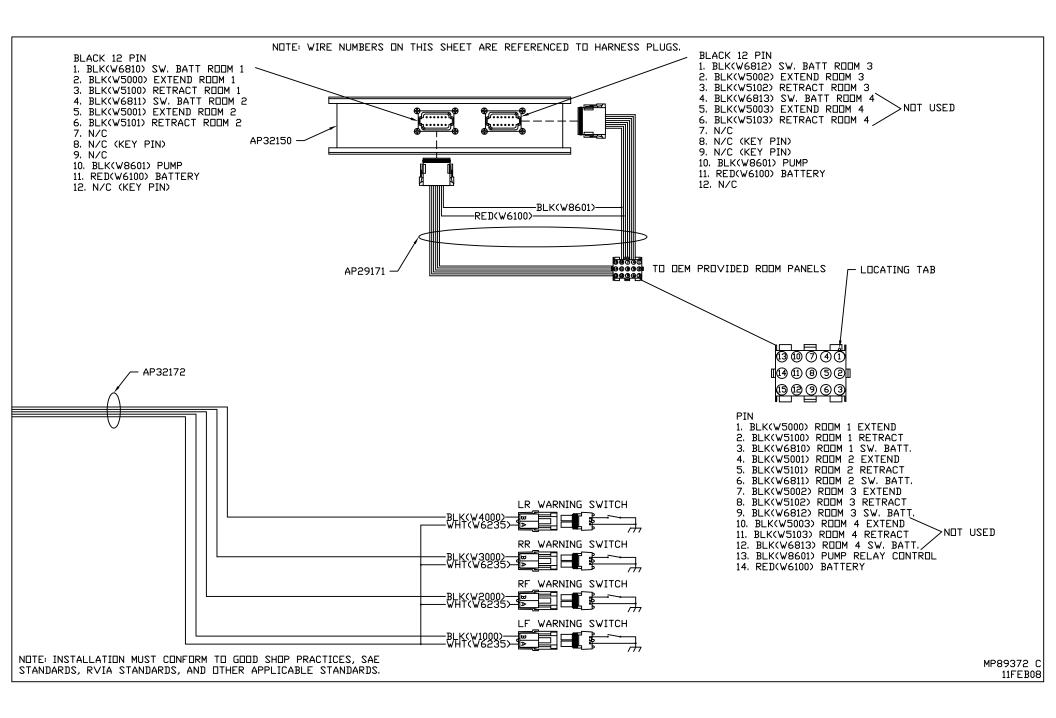

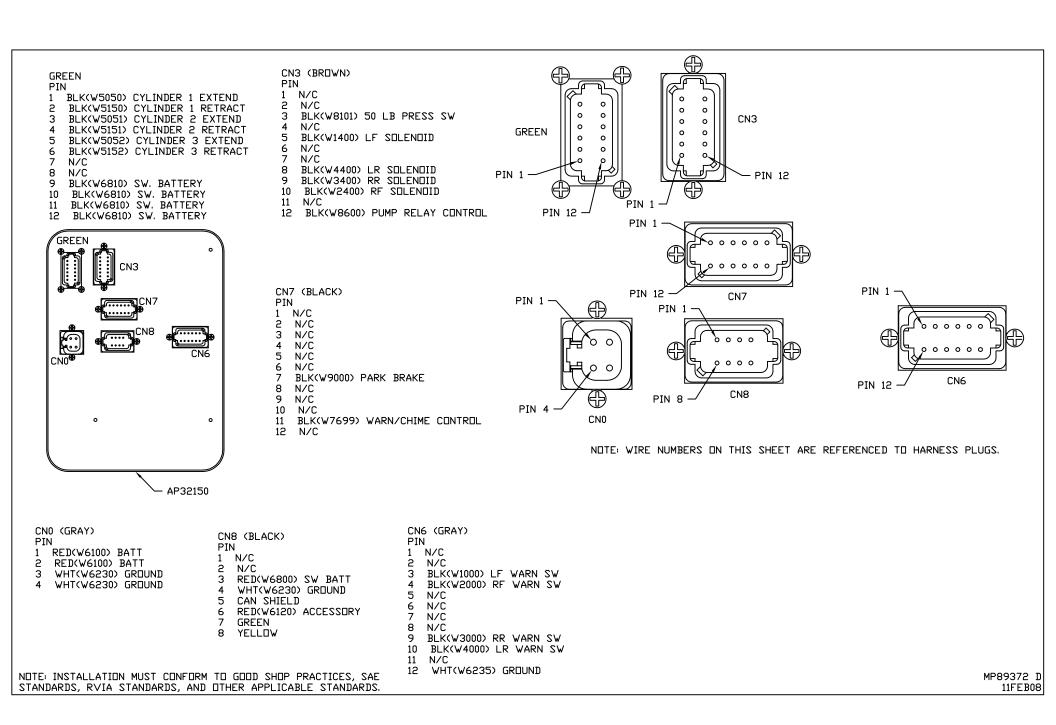

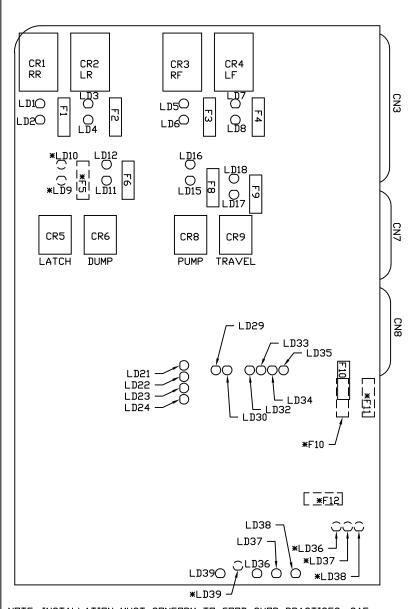

LED #	COLOR	DESCRIPTION
LED 1	YELLOW	RR COIL
LED 2	RED	RR CONTACT
LED 3	YELLOW	LR COIL
LED 4	RED	LR CONTACT
LED 5	YELLOW	RF COIL
LED 6	RED	RF C□NTACT
LED 7	YELLOW	LF COIL
LED 8	RED	LF CONTACT
*LED 9	YELLOW	
*LED 10	RED	
LED 11	YELLOW	DUMP COIL
LED 12	RED	DUMP CONTACT
LED 15	YELLOW	PUMP COIL
LED 16	RED	PUMP CONTACT
LED 17	YELLOW	TRAVEL COIL
LED 18		TRAVEL CONTACT
	YELLOW	LF WARN SW
LED 22		RF WARN SW
LED 23		RR WARN SW
LED 24	YELLOW	LR WARN SW
LED 29		NOT USED
LED 30		NOT USED
LED 32	RED	MASTER WARNING CONTROL
LED 33		50 LB PSW INPUT
LED 34	RED	JACK INTERRUPT
LED 35	RED	PARK BRAKE
LED 36	RED	BOARD ENABLED
LED 37		ACCESSORY IN
LED 38		ACCESSORY OUT
LED 39	RED	LINK LIGHT

EUGE	D.4. T.1.1.C	DECORIDETED
FUSE	RATING	DESCRIPTION
F1	15 AMP	RR OUTPUT
F2	15 AMP	LR OUTPUT
F3	15 AMP	RF OUTPUT
F4	15 AMP	LF OUTPUT
*F5	NOT USED	
F6	5 AMP	DUMP DUTPUT
F8	5 AMP	PUMP DUTPUT
F9	5 AMP	TRAVEL DUTPUT
F10	7.5 AMP	ACC INPUT
*F11	3 AMP	WARN LIGHT SUPPLY
*F12	10 AMP	ACC DUTPUT

NOTE: COMPONENTS MARKED WITH A **' ARE LOCATED ON OLDER 325 BOARD ASSEMBLIES.

ON NEWER BOARD ASSEMBLIES, FUSES F5, F11 AND F12 HAVE BEEN REPLACED BY POLYFUSES. THESE POLYFUSES ARE NOT REPLACEABLE.