MASTER AND PUMP RELAY
WIRING DIAGRAM
ALTERNATE GROUNDING 4.50 MOTORS

GROUND WIRES FOR RELAYS NOT IN THE HARNESS
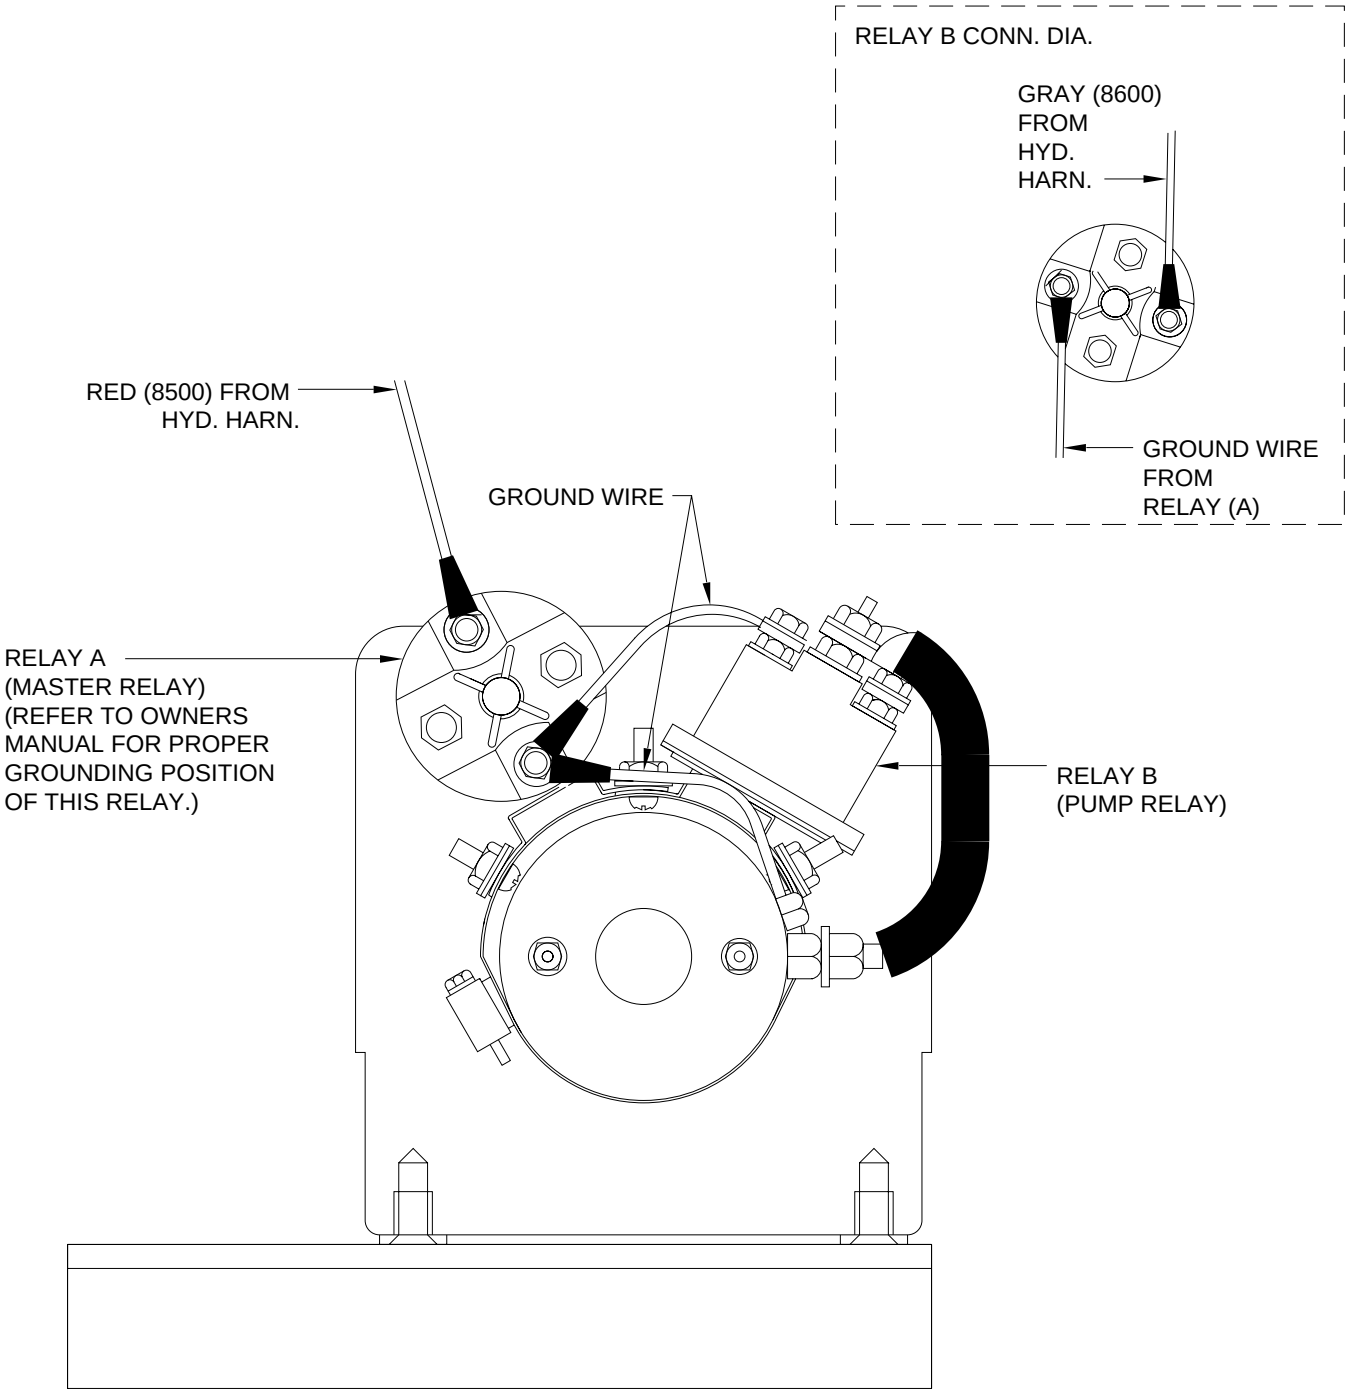
TWO JUMPER WIRES ARE SHIPPED LOOSE WITH THE REPLACEMENT POWER UNIT/VALVE. THESE WIRES ARE USED TO GROUND THE PUMP AND MASTER SOLENOID RELAYS WHEN THE GROUND IS "NOT" PROVIDED BY THE EXISTING HARNESS. RECONNECT THE RELAYS AS THEY WERE BEFORE ON THE SYSTEM OR REFER TO THE OWNERS MANUAL FOR PROPER WIRING DIAGRAMS. CONTACT "HWH CORPORATION." CUSTOMER SERVICE, 1-800-321-3494, FOR ANY FURTHER ASSISTANCE.