

9000# Jack Kit and Spacer/Cross-Tie Kit: Straight-Acting Jacks


Application: Mounting Straight-Acting Jacks on FRONT Workhorse: W20, W22, W24, 2004 thru 2006 chassis with 22.5" TIRES.

Mfr. #: AP34439 9000# Front Jack Kit
Includes: 2 - AP34592 Jack 9000x15 AMF WS
 1 - AP35037 Hardware Kit

Mfr. #: 1 - AP34441 Spacer/Tie Kit 9S WH22F
Includes: 2 - AP34535 Mtg Brackets - AMWH/9SF
 1 - AP34549 CrossTie - AMWH/6SF
 2 - AP35034 Hardware Kit 7/16"

M.S.R.P.: See Item Price Listing

M.S.R.P.: See Item Price Listing

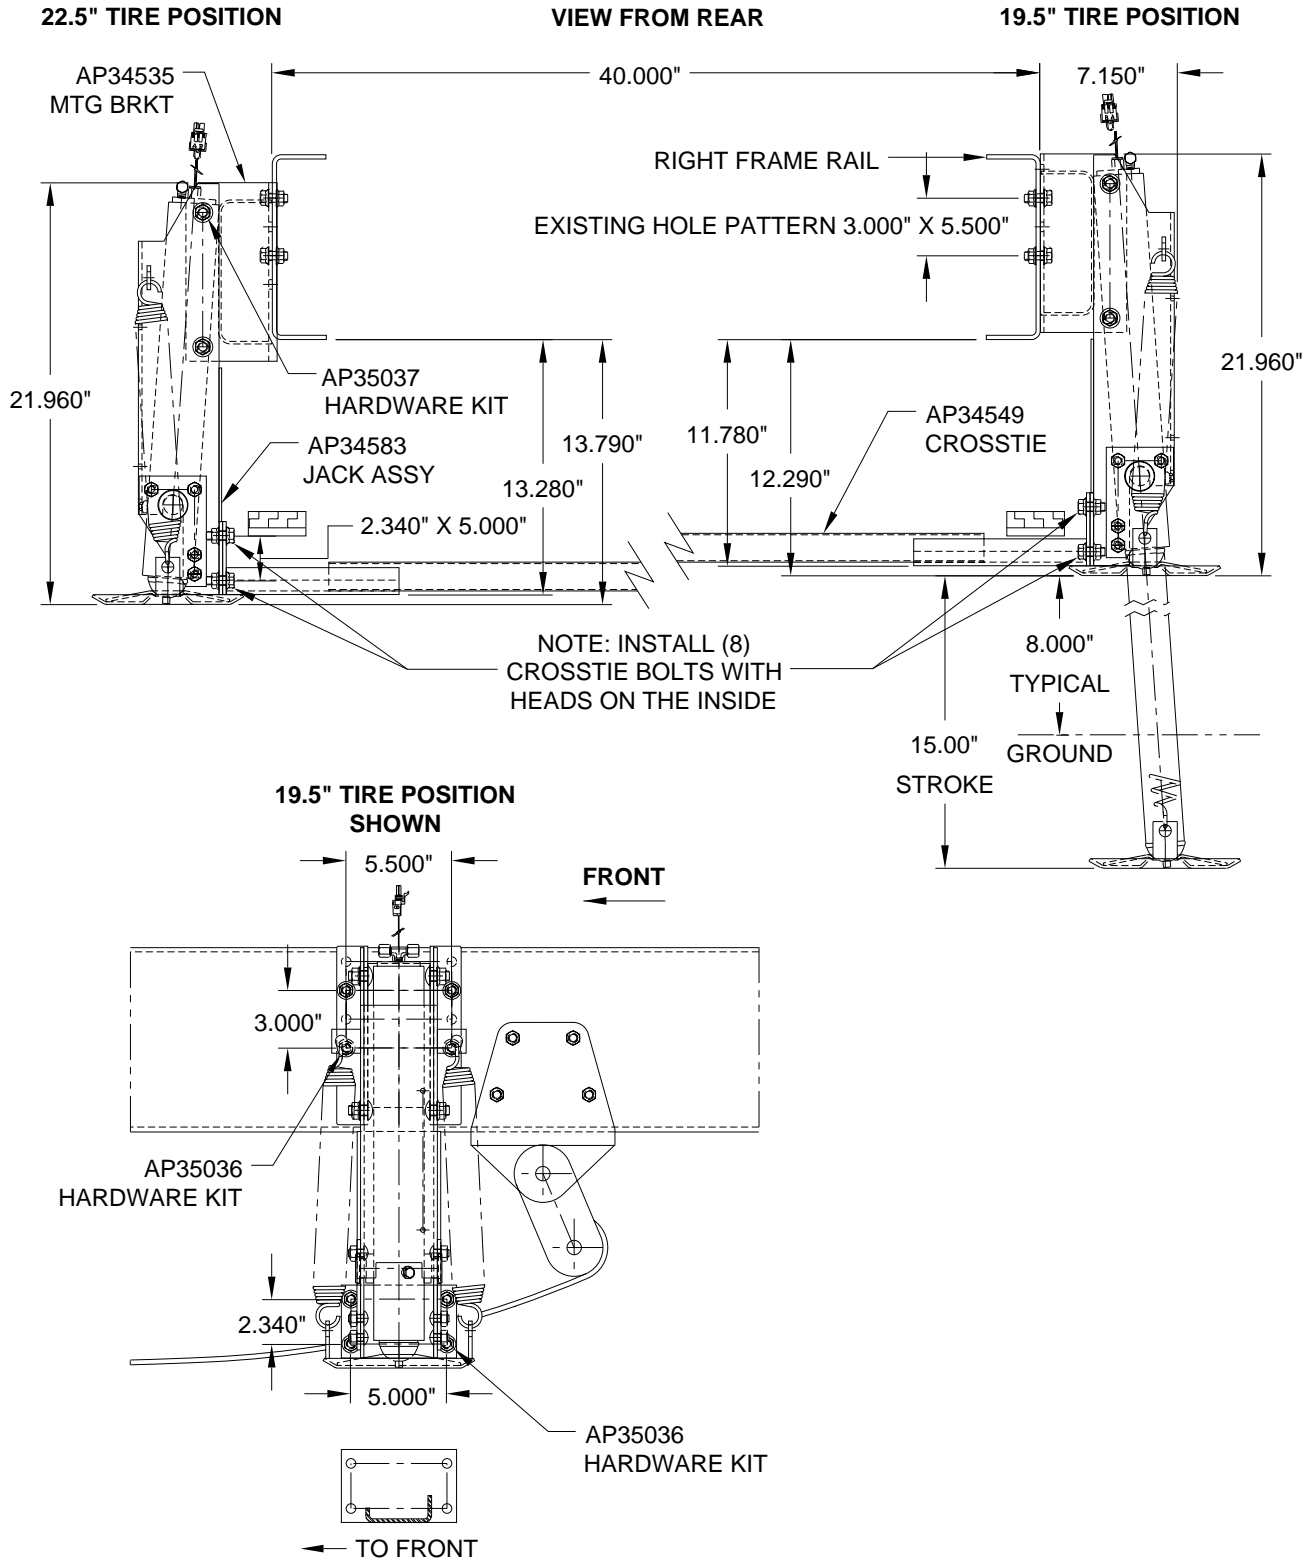

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.1074
 05JUN14