

6000# Jack Kit: Straight-Acting Jacks



Application: For rear of 2008 and later Dodge Sprinter 3500 chassis with the V6 engine.

Mfr. #: AP43393 6000# Jack Kit

Includes: 1 - AP41999 6000# x 13" Stroke Left Jack Assy.
 1 - AP41998 6000# x 13" Stroke Right Jack Assy.
 1 - AP43391 U-Bolt Hardware Kit

1 - AP45425 - Crosstie
 1 - AP45538 - Crosstie Hardware Kit

M.S.R.P.: See Item Price Listing

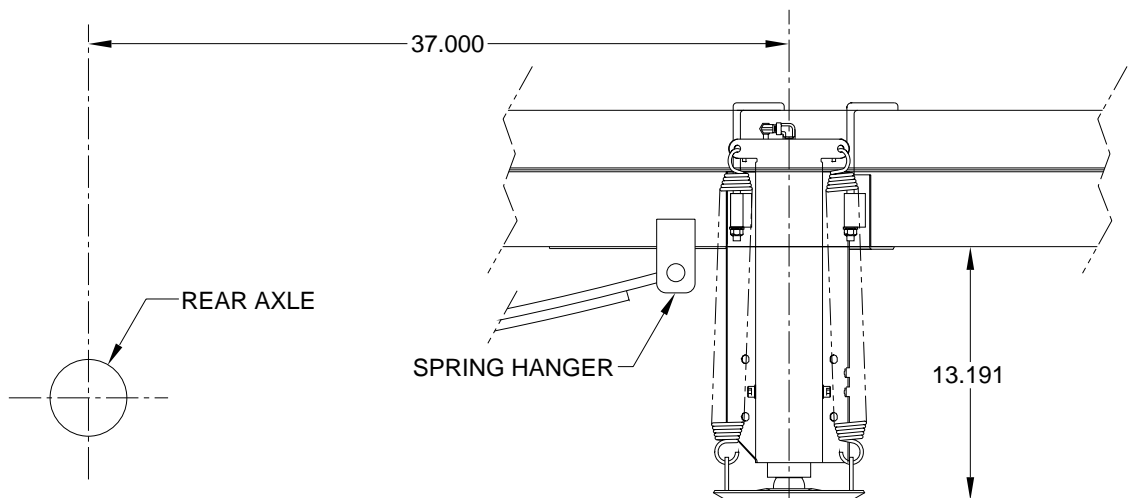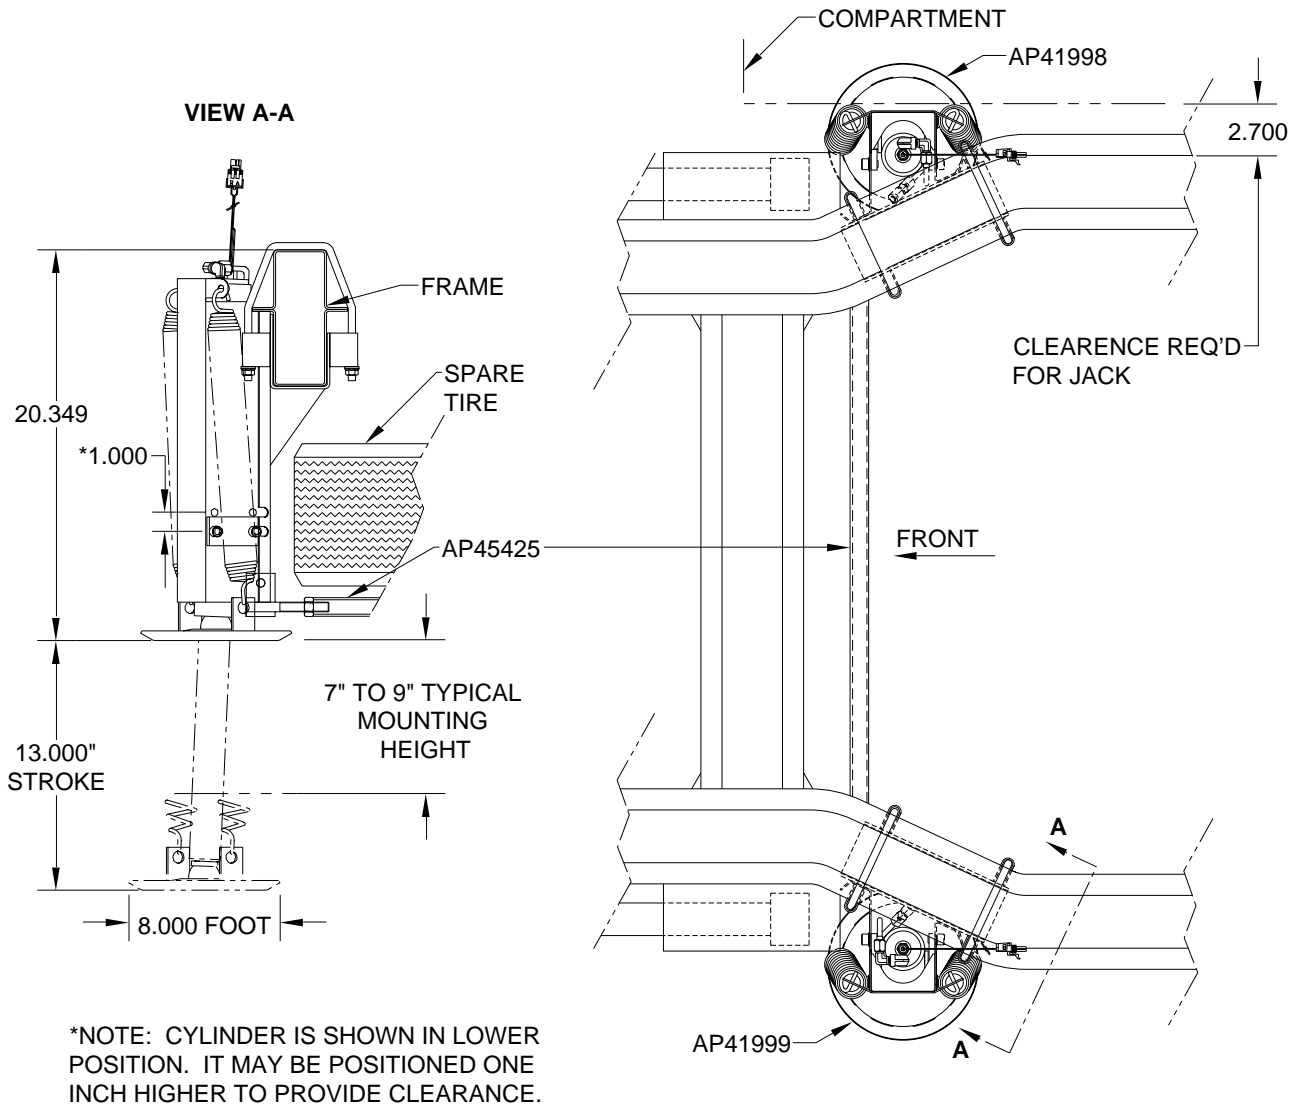

NOTE: ALL DIMENSIONS ARE APPROXIMATE

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.1079
 17SEP10