

# 6000# Jack Kit and Spacer/Cross-Tie Kit: Straight-Acting Jacks

**Application:** Mounting Straight-Acting Jacks on the FRONT OF FORD F53, 2004 thru 2011 chassis with 19.5"-22.5" TIRES.


**Mfr. #:** AP49760 6000# Front Jack Kit  
**Includes:** 2 - AP46766 Jack 6000x15 FXBA WS

**Mfr. #:** 1 - AP49762 Mtg/Tie Kit 6S 4F53F  
**Includes:** 2 - AP48079 Mtg Brkt - 6S FDR THRD BO  
 1 - AP48139 Clamp Kit 6S Mtg Outer  
 1 - AP49763 Clamp Kit 6S CT THRU  
 1 - AP35035 Hardware Kit 7/16"  
 1 - P49783 Crosstie-6K-FDF: Formed

**M.S.R.P.:** See Item Price Listing

**M.S.R.P.:** See Item Price Listing

**Note:** this sheet is for 2004 thru 2011 chassis. 2004 motor homes may have a 2003 chassis. The 10th digit of the VIN code will be "3" 2003 chassis or "4" 2004 chassis.

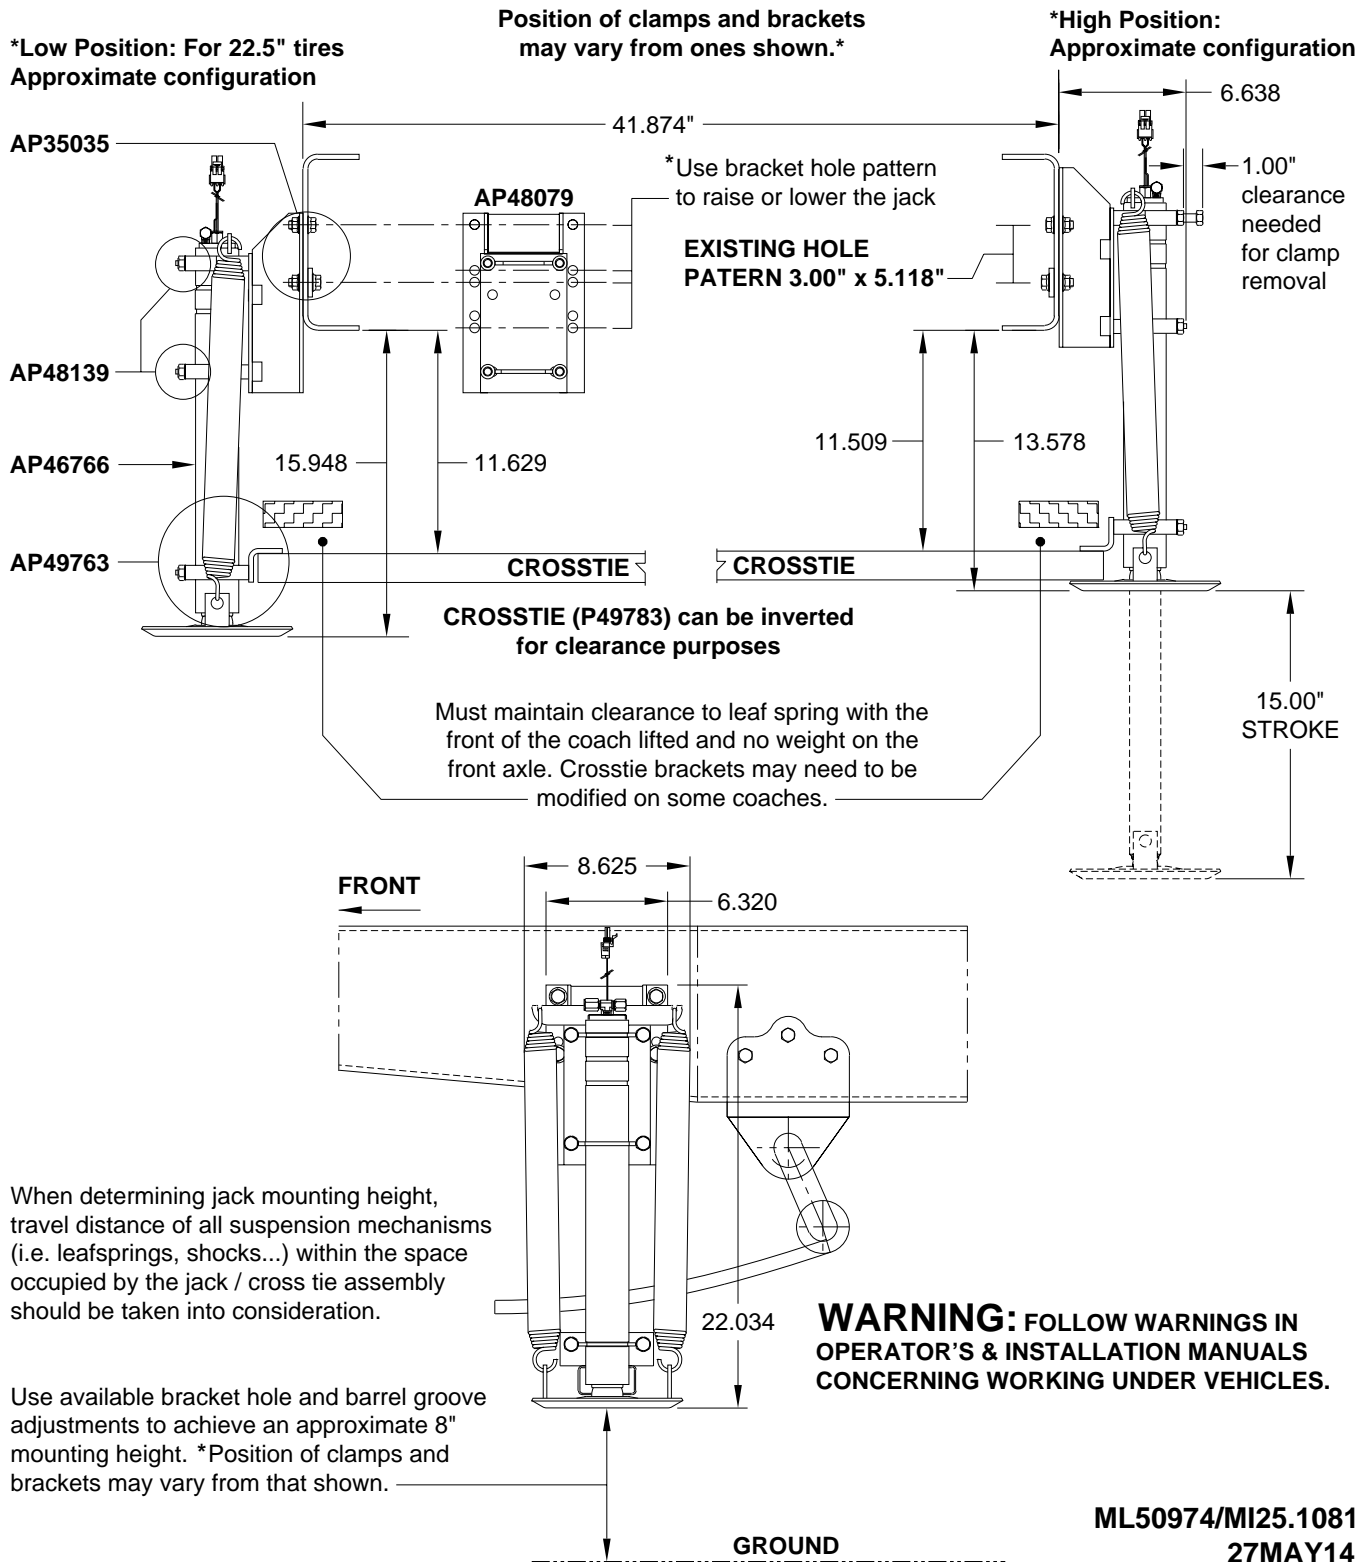

When determining jack mounting height, travel distance of all suspension mechanisms (i.e. leafsprings, shocks...) within the space occupied by the jack / cross tie assembly should be taken into consideration.

Use available bracket hole and barrel groove adjustments to achieve an approximate 8" mounting height. \*Position of clamps and brackets may vary from that shown.