

9000# Jack Kit and Mtg/Tie Kit: Straight-Acting Jacks

Application: Mounting Straight-Acting Jacks on the REAR OF FORD, 2004 thru 2011 chassis with 19.5-22.5" TIRES.


Mfr. #: AP49761 9000# Rear Jack Kit
Includes: 2 - AP49759 Jack 9000x15 FXBA WS

Mfr. #: 1 - AP49764 Mtg/Tie Kit 9S FD/WH
Includes: 2 - AP48082 Mtg Brkt - 9S FDR THRD BO
 1 - AP48141 Clamp Kit 9S Mtg Outer
 1 - AP49765 Clamp Kit 9K CT THRU
 1 - AP16184 Hardware Kit 7/16"
 1 - P43079 Crosstie Inner 38" Formed

M.S.R.P.: See Item Price Listing

M.S.R.P.: See Item Price Listing

Note: this sheet is for 2004 thru 2011 chassis. 2004 motor homes may have a 2003 chassis. The 10th digit of the VIN code will be "3" 2003 chassis or "4" 2004 chassis.

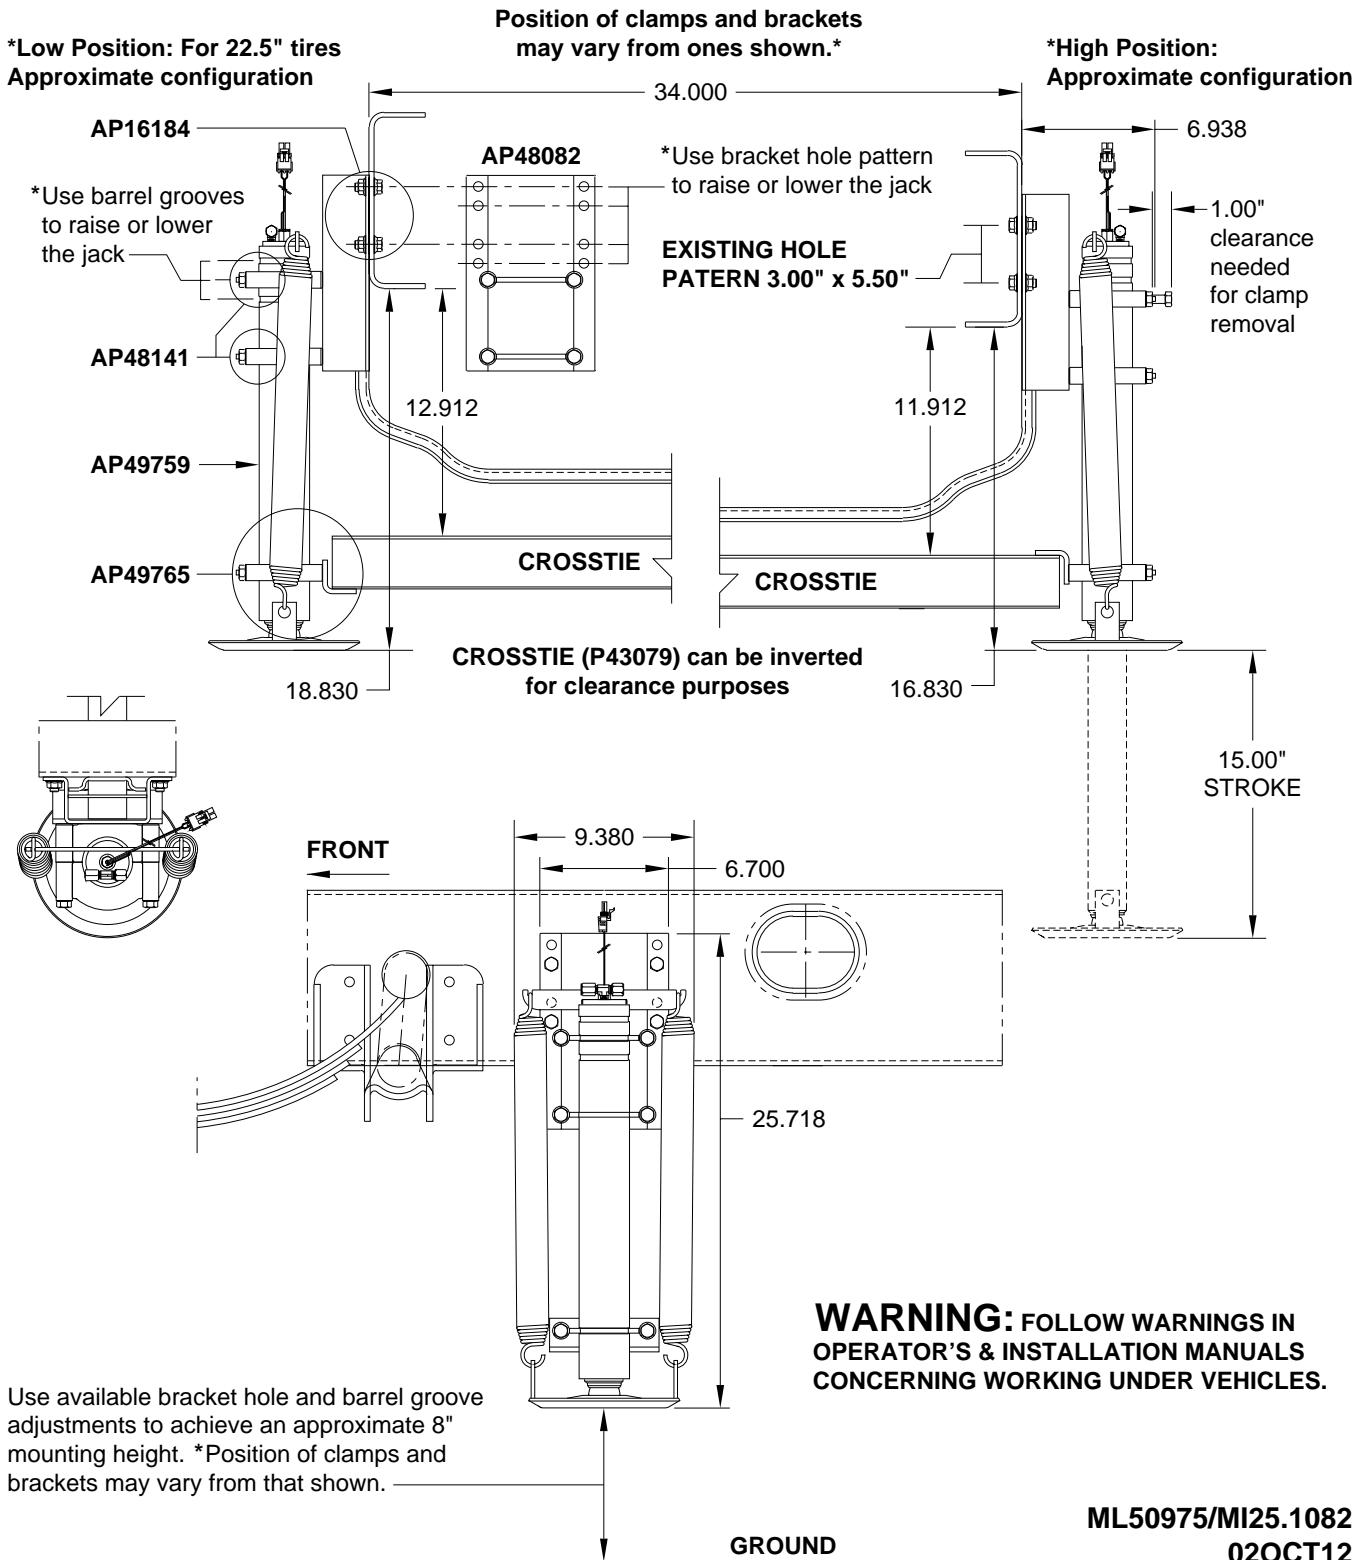

ML50975/MI25.1082
 02OCT12