## Mounting Bracket Kit: Kick-Down Jacks

Application: For mounting Kick-Down Jacks on the FRONT OF OSHKOSH X chassis with SPRING SUSPENSION


and 19.5" TIRES. Front bracket.


Mfr. #: AP0316 Bracket Kit Oshkosh X

Includes: 2 - AP8564 Bracket

1 - AP7538 Hardware Kit

M.S.R.P.: See Item Price Listing

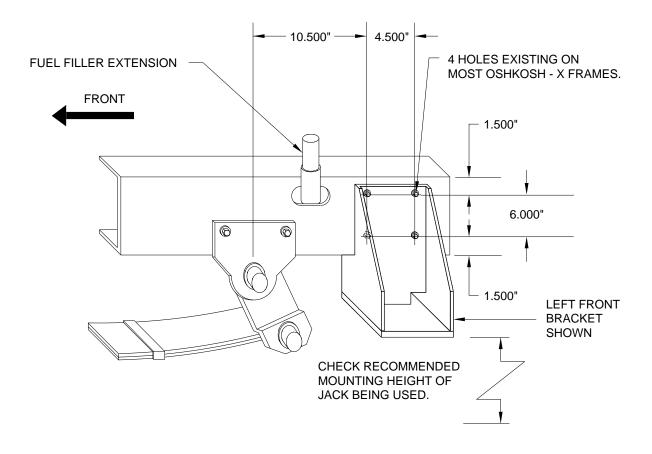

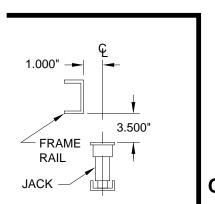

**CAUTION:** Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.