


Mounting Bracket Kit: Kick-Down Jacks

Application: For mounting Kick-Down Jacks on the FRONT OF SPARTAN EC2000 chassis with STEEL LEAF SPRING SUSPENSION. Front bracket.

Mfr. #: AP0314 Bracket Kit Spartan EC2000 Front


Includes: 1 - AP1569 EC2000 Left
1 - AP1570 EC2000 Right
1 - AP6583 Hardware Kit

M.S.R.P.: See Item Price Listing

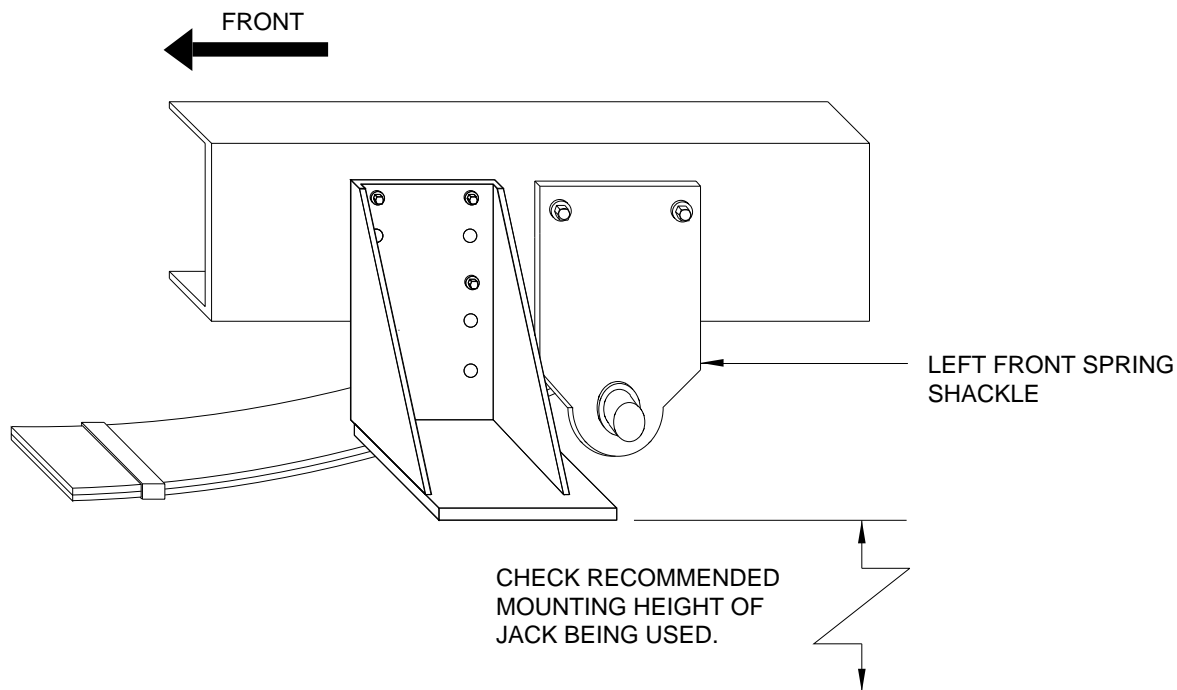

NOTE: USE 4 BOLTS TO MOUNT BRACKET. THE MINIMUM SPACING VERTICALLY BETWEEN BOLTS IS 3 INCHES.

NOTE: TURN WHEELS FROM LOCK TO LOCK TO CHECK TIRE CLEARANCE.

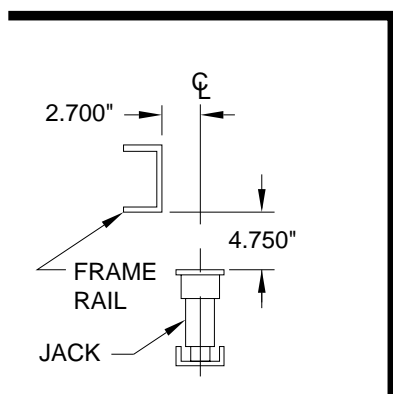

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.1120
16FEB01