


6000# Jack Kit: Straight-Acting Jacks


Application: For rear of Ford E350/E450 Chassis and Winnebago Aspect / Itasca Cambria.

Mfr. #: AP36365 6000# Jack Kit
Includes: 2 - AP37148 6000# x 13" Stroke Jack
 1 - AP37179 Hardware Kit
M.S.R.P.: See Item Price Listing

Mfr. #: AP36366 Crosstie Kit
Includes: 1 - AP44160 Crosstie
 1 - AP37179 Hardware Kit
M.S.R.P.: See Item Price Listing

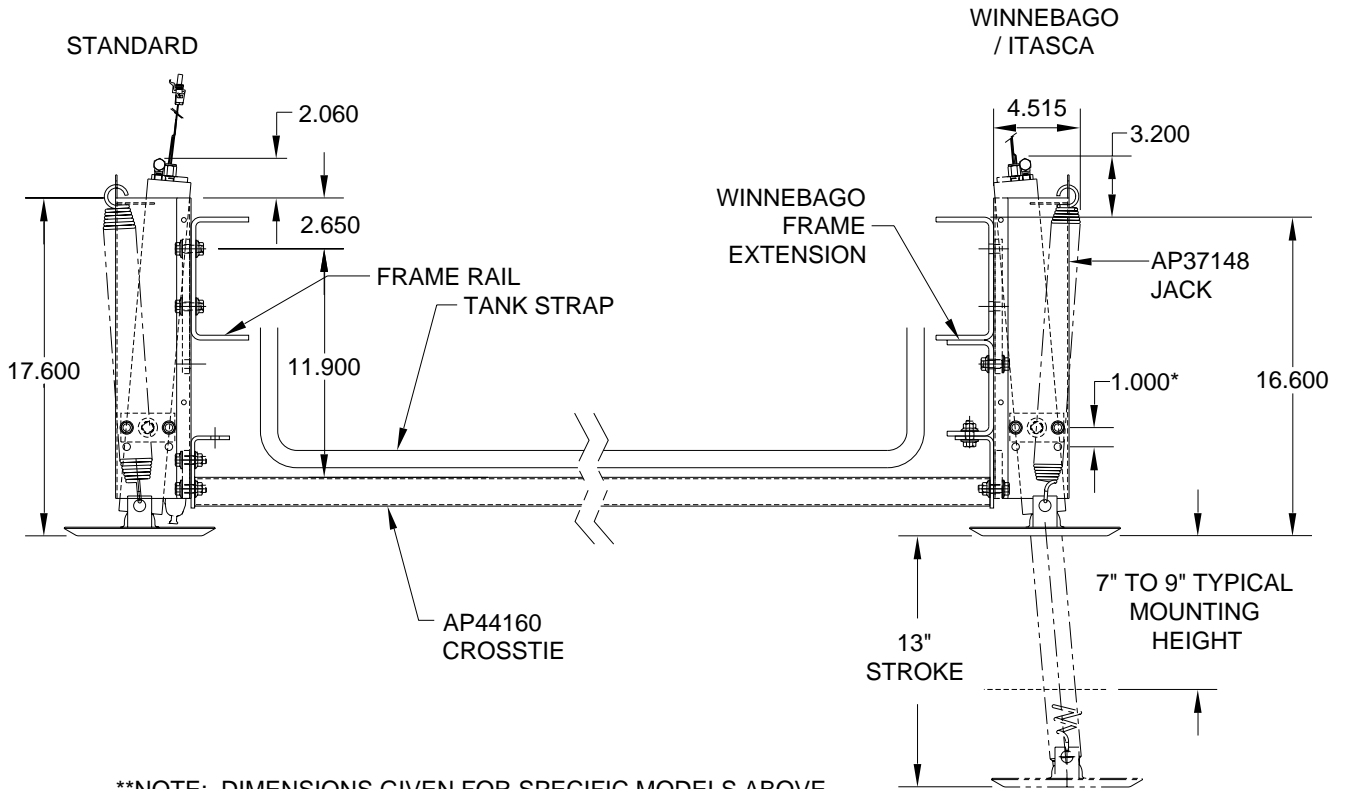

****NOTE:** DIMENSIONS GIVEN FOR SPECIFIC MODELS ABOVE.
 FOR OTHER COACHES, THE JACK MAY NEED TO BE JUST TO THE REAR
 OF THE FUEL TANK. CHECK CROSSTIE CLEARANCE BEFORE MOUNTING.

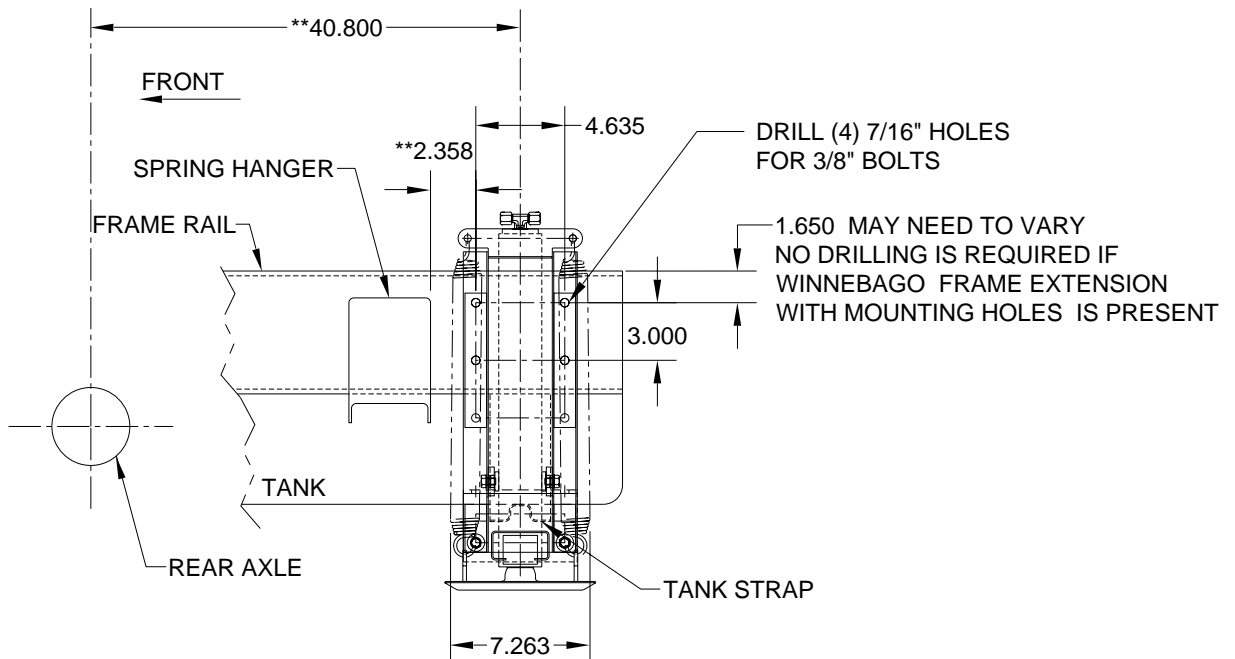

NOTE: SEE MI15.99 FOR PRESSURE SWITCH MOUNTING INFORMATION.

NOTE: ALL DIMENSIONS ARE APPROXIMATE

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

**MI25.1198
 20SEP10**