

# 4000# Jack Kit: Straight-Acting Jacks

**Application:** For rear of Dodge Sprinter 2500 Chassis with single rear tires (no duals).

**Mfr. #: AP37942 4000# Jack Kit**


**Includes:** 2 - AP39573 4000# x 13" Stroke Jack Assy.  
1 - AP0103 Hardware Kit

**Mfr. #: AP49302 Cross tie Kit**

**Includes:** 1 - AP49299 Upper Cross tie  
1 - AP37867 Lower Cross tie  
1 - AP37949 Hardware Kit  
1 - AP0103 Hardware Kit

**M.S.R.P.:** See Item Price Listing

**M.S.R.P.:** See Item Price Listing

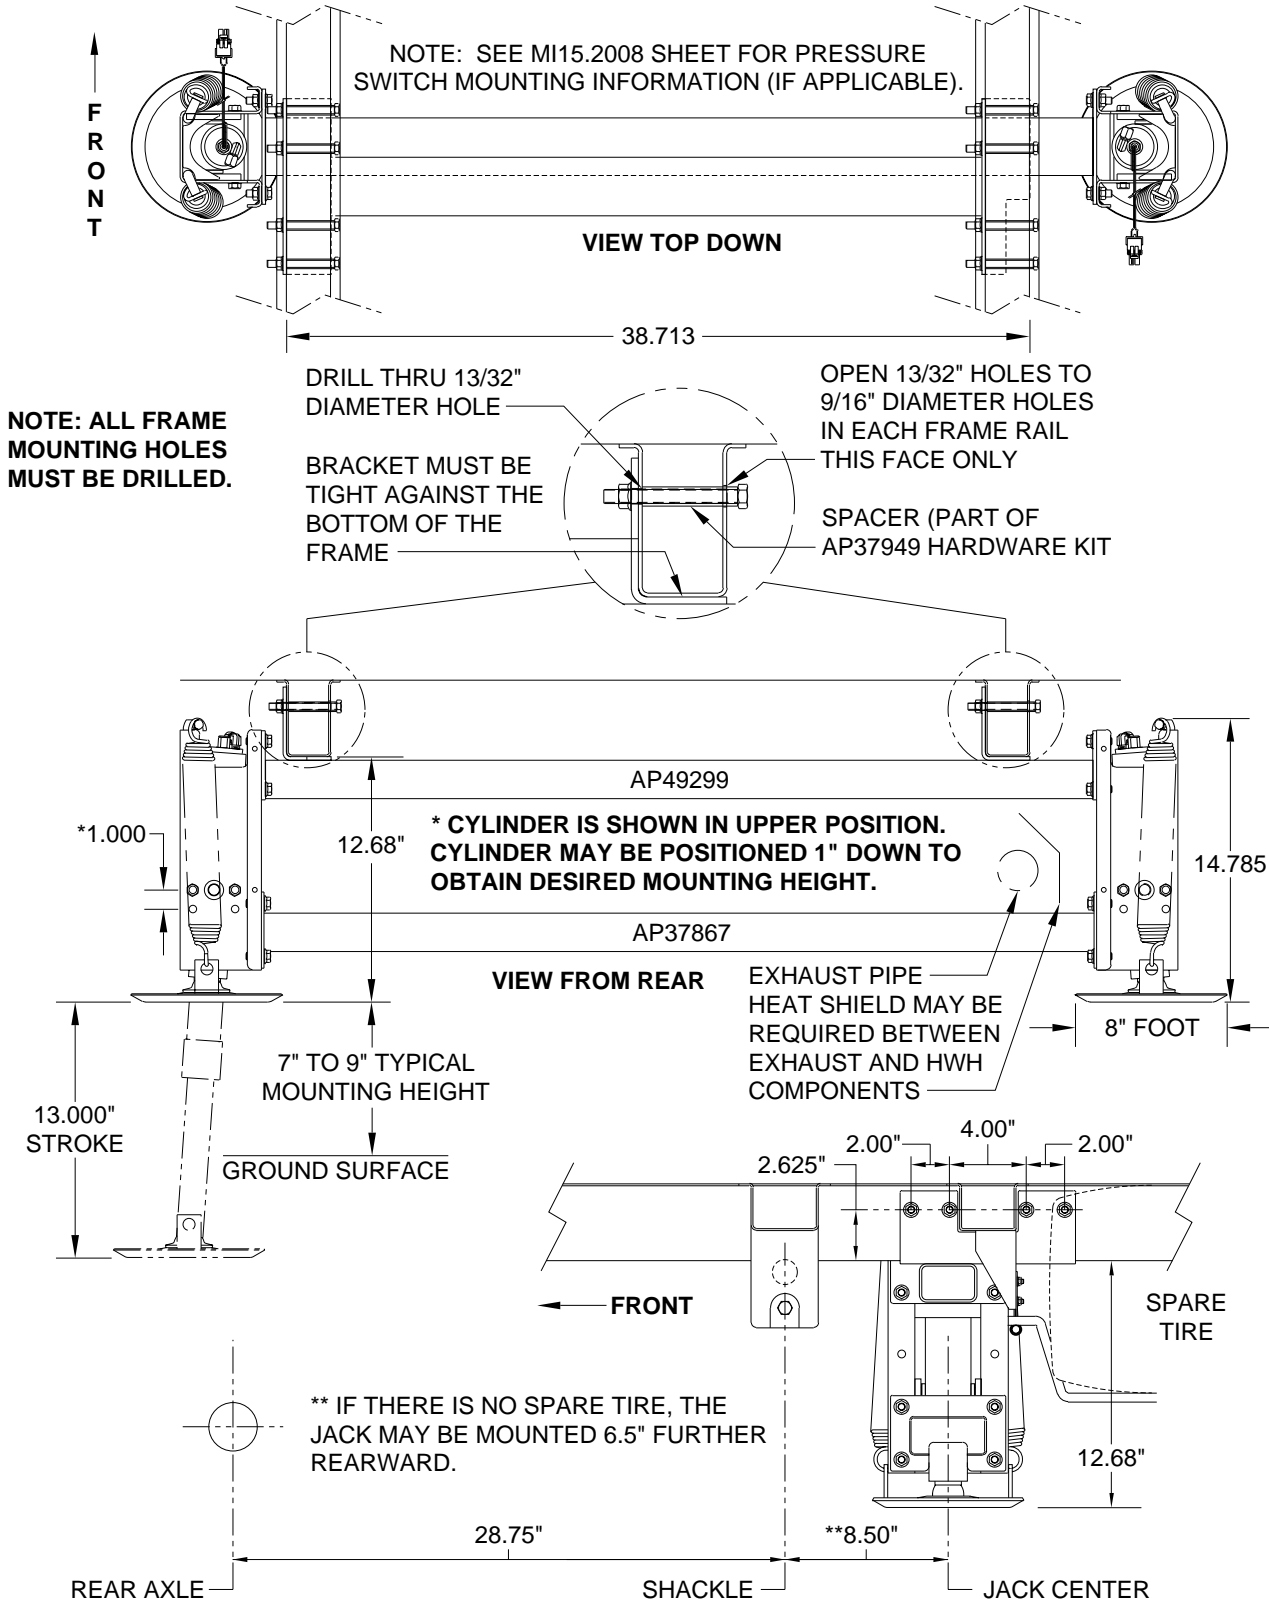

**NOTE: ALL DIMENSIONS ARE APPROXIMATE**

**CAUTION:** Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

**MI25.1200A  
30SEP11**