



Jack/Warning Switch & Bracket/Cross Tie Kit: Straight-Acting Jacks

Application: For mounting Straight-Acting Jacks on the front of Chevy C5500 chassis: 19,500 GVWR

Mfr. #: AP28811 Jack Kit -
Includes: 2 - AP28812 Jack Assembly
 2 - AP2043 Hardware Kit
M.S.R.P.: See Item Price Listing

Mfr. #: AP28804 Warning
 Switch Kit
Includes: 2 - AP26641
 Switch Warning
M.S.R.P.: See Item Price Listing

Mfr. #: AP32326 Front Bracket/
 Cross Tie kit
Includes: 1 - AP2042 Hardware Kit
 2 - AP32872 Hardware Kits
 2 - P1915 Gussets
 1 - P25492 Cross Tie
 2 - AP33923 Mounting Brackets
M.S.R.P.: See Item Price Listing

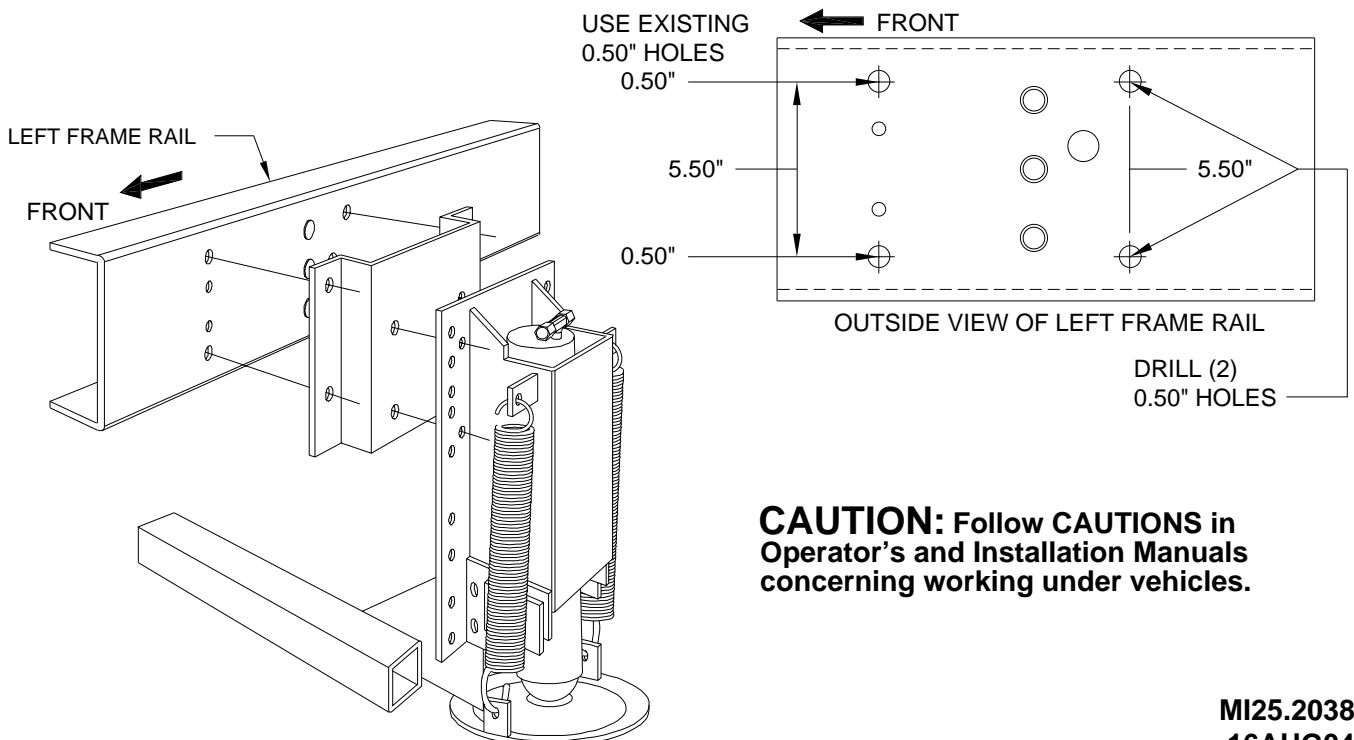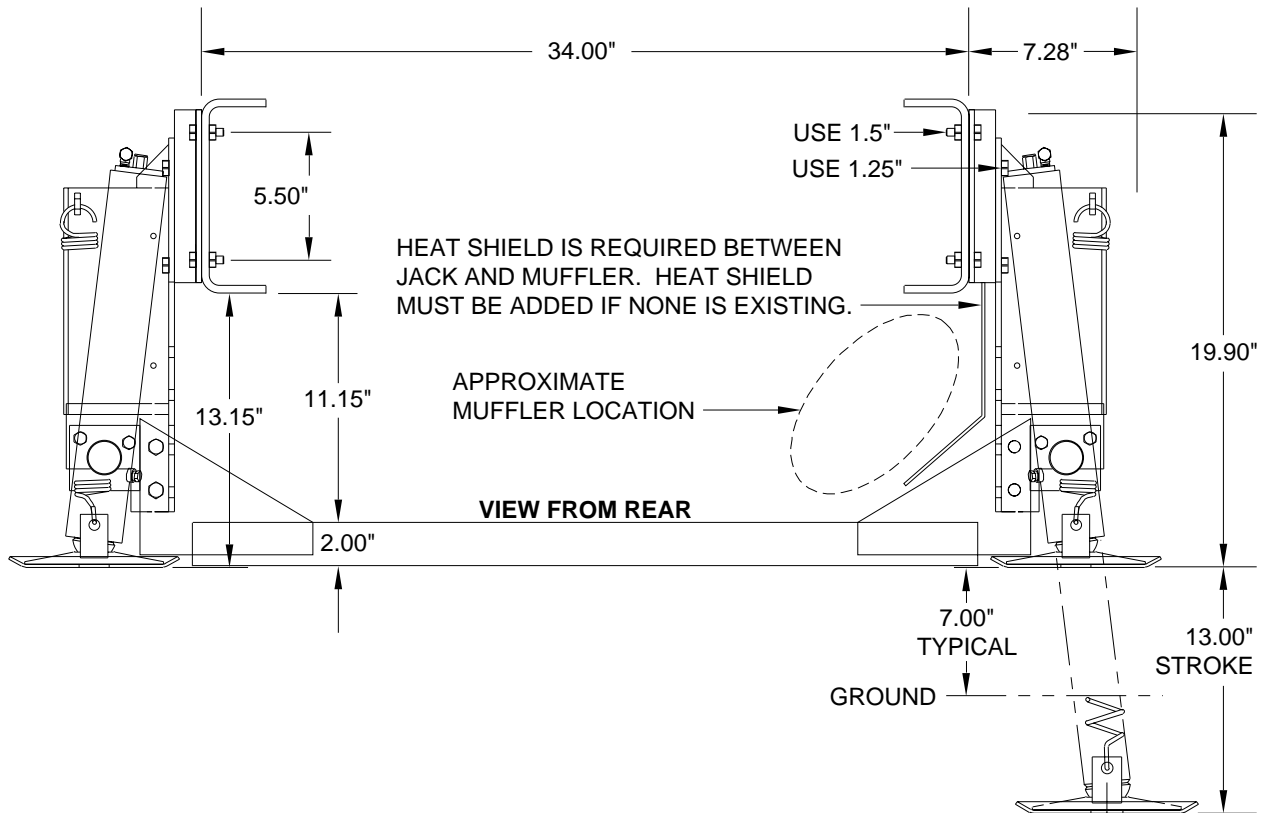

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.