

# 9000# Jack Kit and Spacer/Cross-Tie Kit: Straight-Acting Jacks

**Application:** Mounting Straight-Acting Jacks on REAR Workhorse: W20, W22, W24, 2004 thru 2006 chassis with 19.5-22.5" TIRES.

**Mfr. #:** AP34440 9000# Rear Jack Kit  
**Includes:** 2 - AP34595 Jack 9000x15 AMR WS  
 1 - AP35038 Hardware Kit 7/16"  
 4 - P34599 Spacer - 1.00"

**Mfr. #:** 1 - AP34446 Spacer/Tie Kit 9S FD/WH  
**Includes:** 1 - AP34540 CrossTie - AMWH/9SR  
 1 - AP35038 Hardware Kit 7/16"  
 4 - P35041 Spacer - 1.00"



**M.S.R.P.:** See Item Price Listing

**M.S.R.P.:** See Item Price Listing

22.5" TIRE POSITION


VIEW FROM REAR

19.5" TIRE POSITION

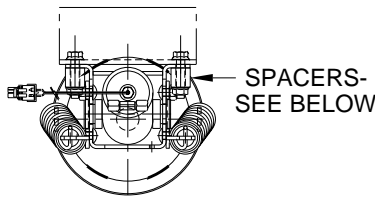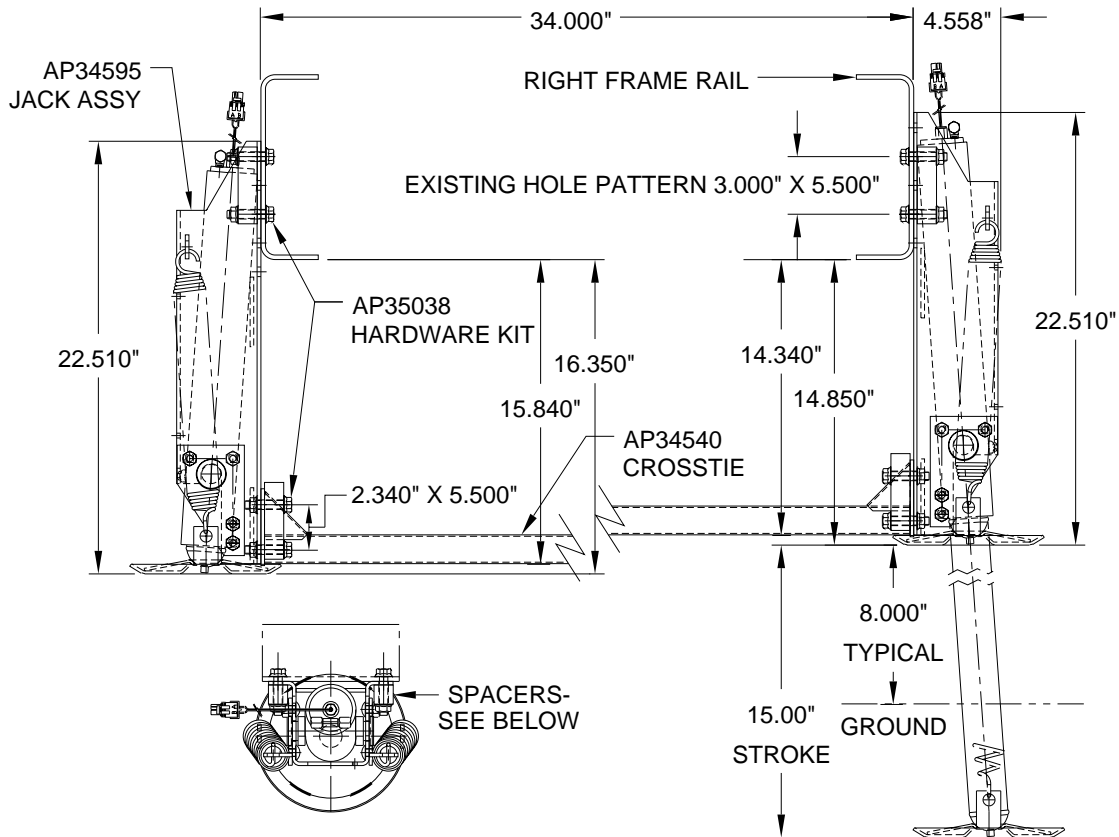

19.5" TIRE POSITION SHOWN

FRONT

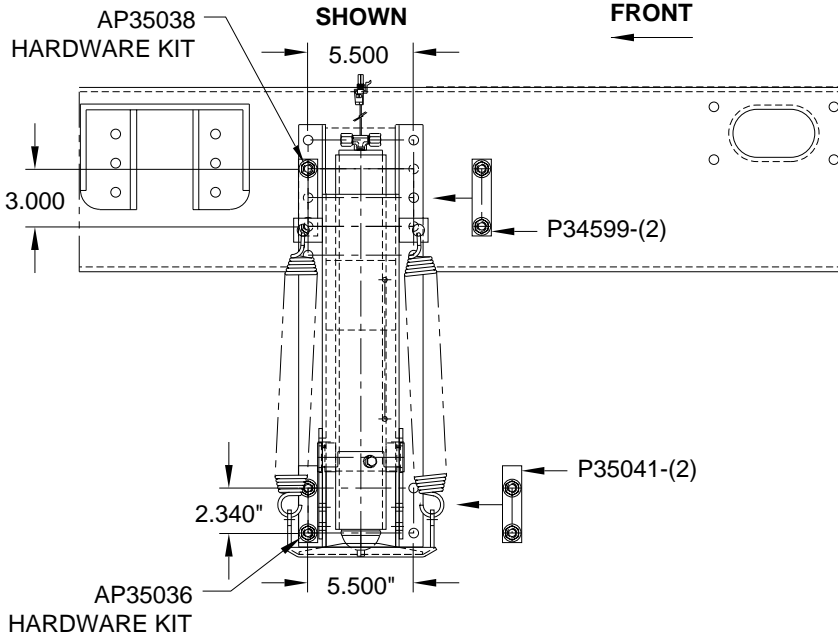

**CAUTION:** Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.1075  
04AUG05