



# Mounting Bracket Kit: Kick-Down Jacks

**Application:** For mounting Kick-Down Jacks on the REAR OF CHEVY P30 chassis with HENSCHEN TAG AXLE.  
Chassis prior to 1993. Rear Bracket.

**Mfr. #:** AP5273 Bracket Kit Chevy Rear Henschen

**Includes:** 1 - AP5170 Bracket Right Rear  
1 - AP5171 Bracket Left Rear  
1 - AP5277 Hardware Kit

**M.S.R.P.:** See Item Price Listing

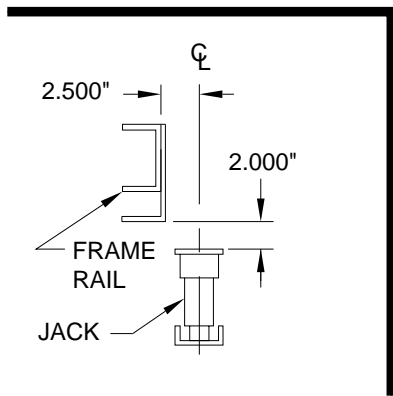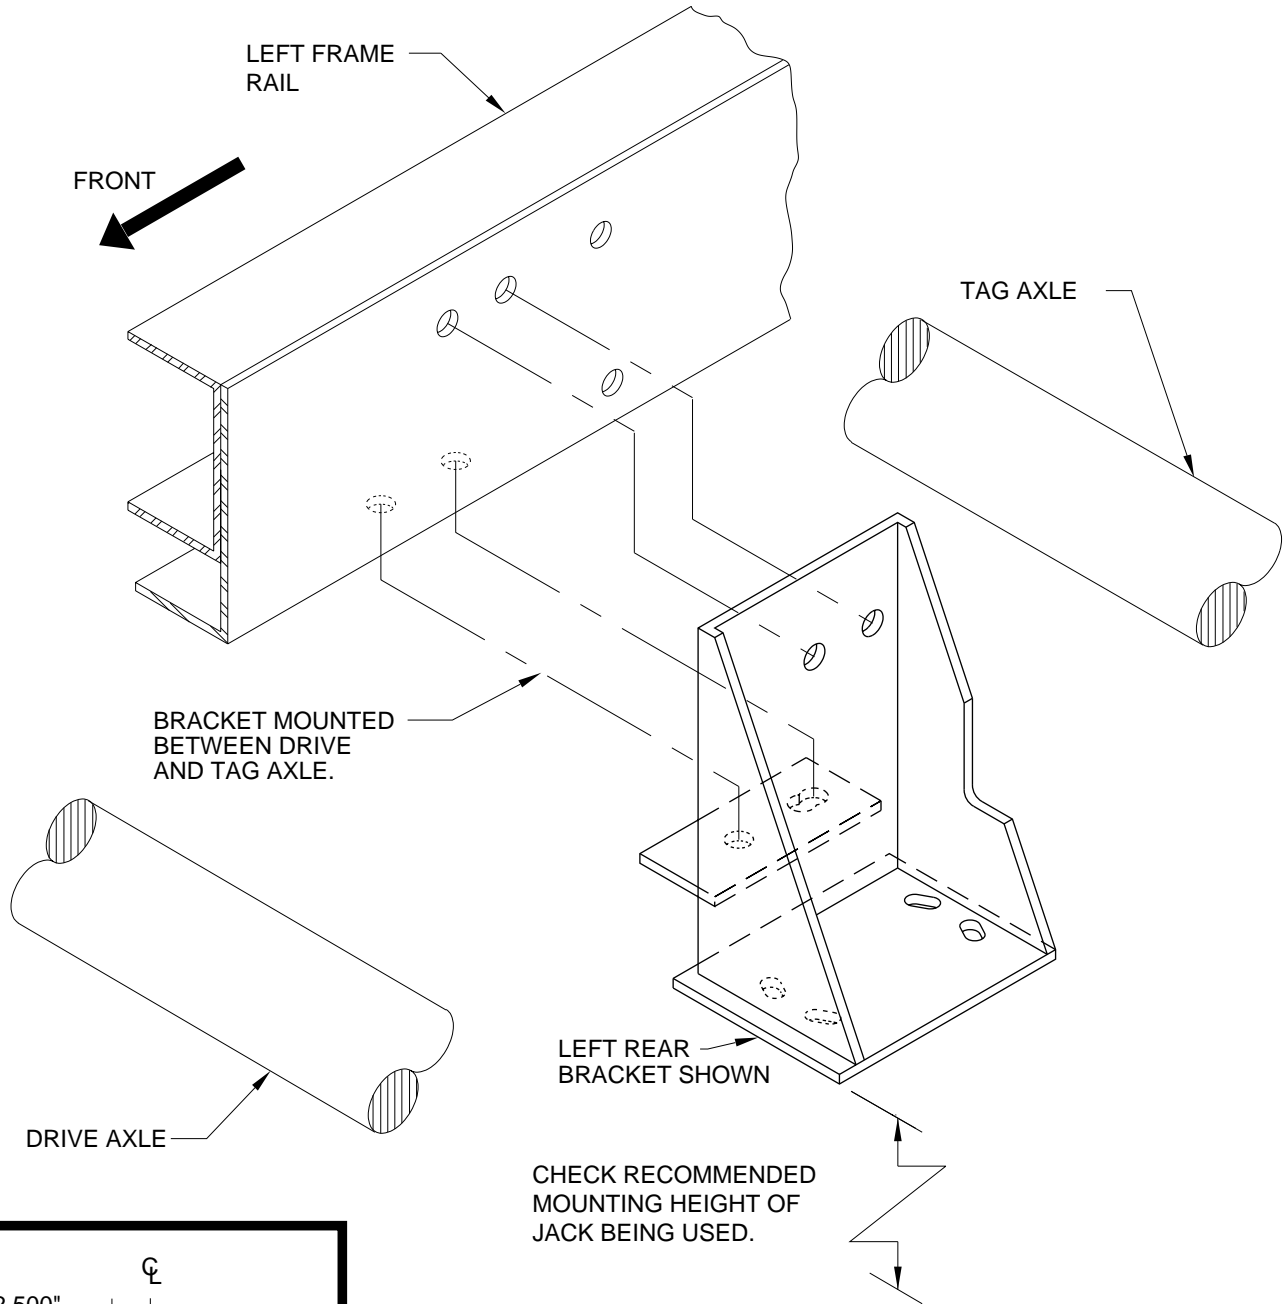

**CAUTION:** Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

**MI25.1160**  
**16FEB01**