


Bracket Kit and 9,000# Jack Kit: Straight-Acting Jacks

Application: For mounting Straight-Acting Jacks on the REAR OF CHEVY P30 chassis with a JET AIR TAG.

Mfr. #: AP10174 Bracket Kit P30 Tag Rear
Includes: 1 - AP10227 Cross Tie
 1 - AP12761 Hardware Kit
M.S.R.P.: See Item Price Listing

Mfr. #: AP10480 Jack Kit
Includes: 2 - AP10466 Jack 9000 x 13"
 2 - AP2043 Hardware Kit
M.S.R.P.: See Item Price Listing

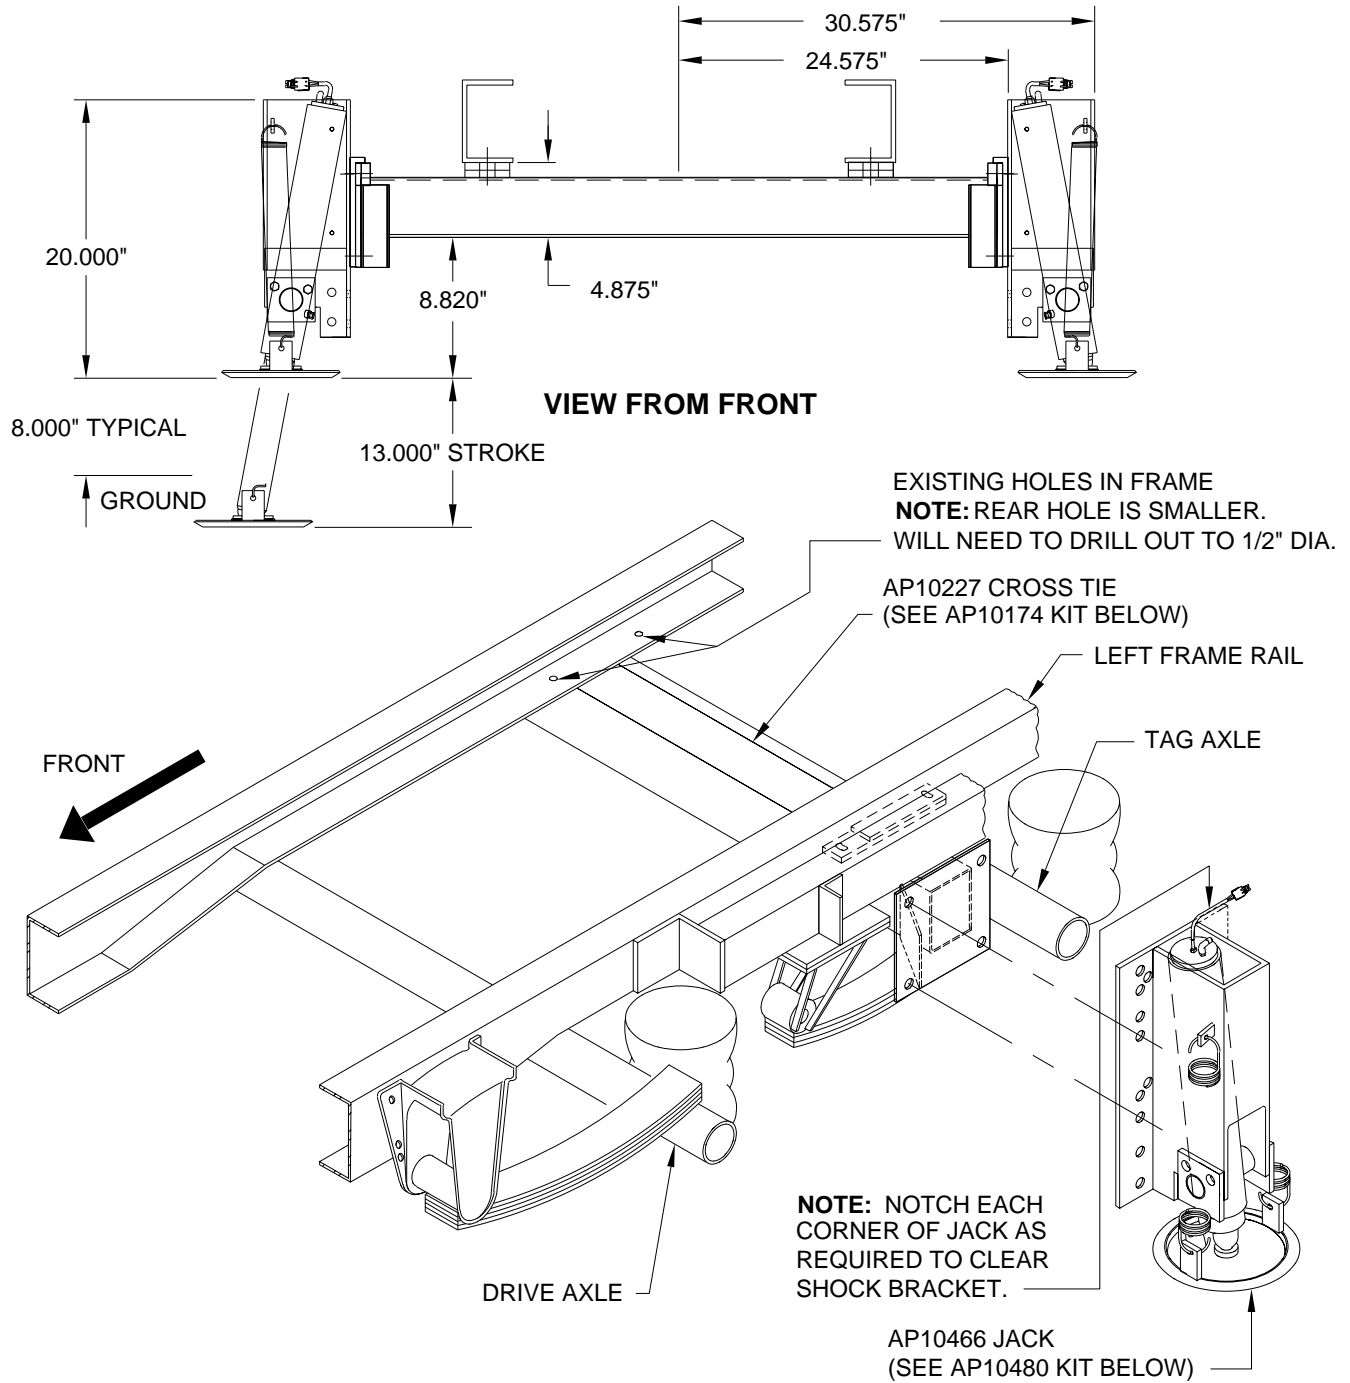

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.4275
 11JAN01