


CONNECTOR #51
 1) FR SENSE
 2) LS SENSE
 3) REAR SENSE
 4) RS SENSE
 5) GND

AP9054
 RS
 LS
 F
 RED
 GREEN
 BLACK
 YELLOW
 WHITE

CONNECTOR #33
 1) IGN. +12V
 2) IGN. RETURN
 3) NC
 4) NC
 5) LAMP CONTROL
 6) PUMP REQUEST
 7) NC
 8) EXTEND REQUEST
 9) RETRACT REQUEST

CONNECTOR #21
 1) NC
 2) NC
 3) NC
 4) LOCKED LIMIT SW.
 5) ROOM IN LIMIT SW.
 6) ROOM OUT LIMIT SW.
 7) NC
 8) UNLOCKED LIMIT SW.
 9) COMMON GND

		HWH		I-80 EXIT 267 SOUTH RT 1 MOSCOW, IOWA 52760	
		SCALE 1:3	DATE 17OCT05	DRAWN BY .	
		SYSTEM SCHEMATIC ELEC			
NO.	DATE	REVISION			
THE INFORMATION DISCLOSED ON THIS DRAWING IS CONFIDENTIAL AND MUST NOT BE DISCLOSED OR USED IN ANY MANNER WHICH WILL BE DETRIMENTAL TO THE HWH CORPORATION				DRAWING NUMBER MP88690 A/C	

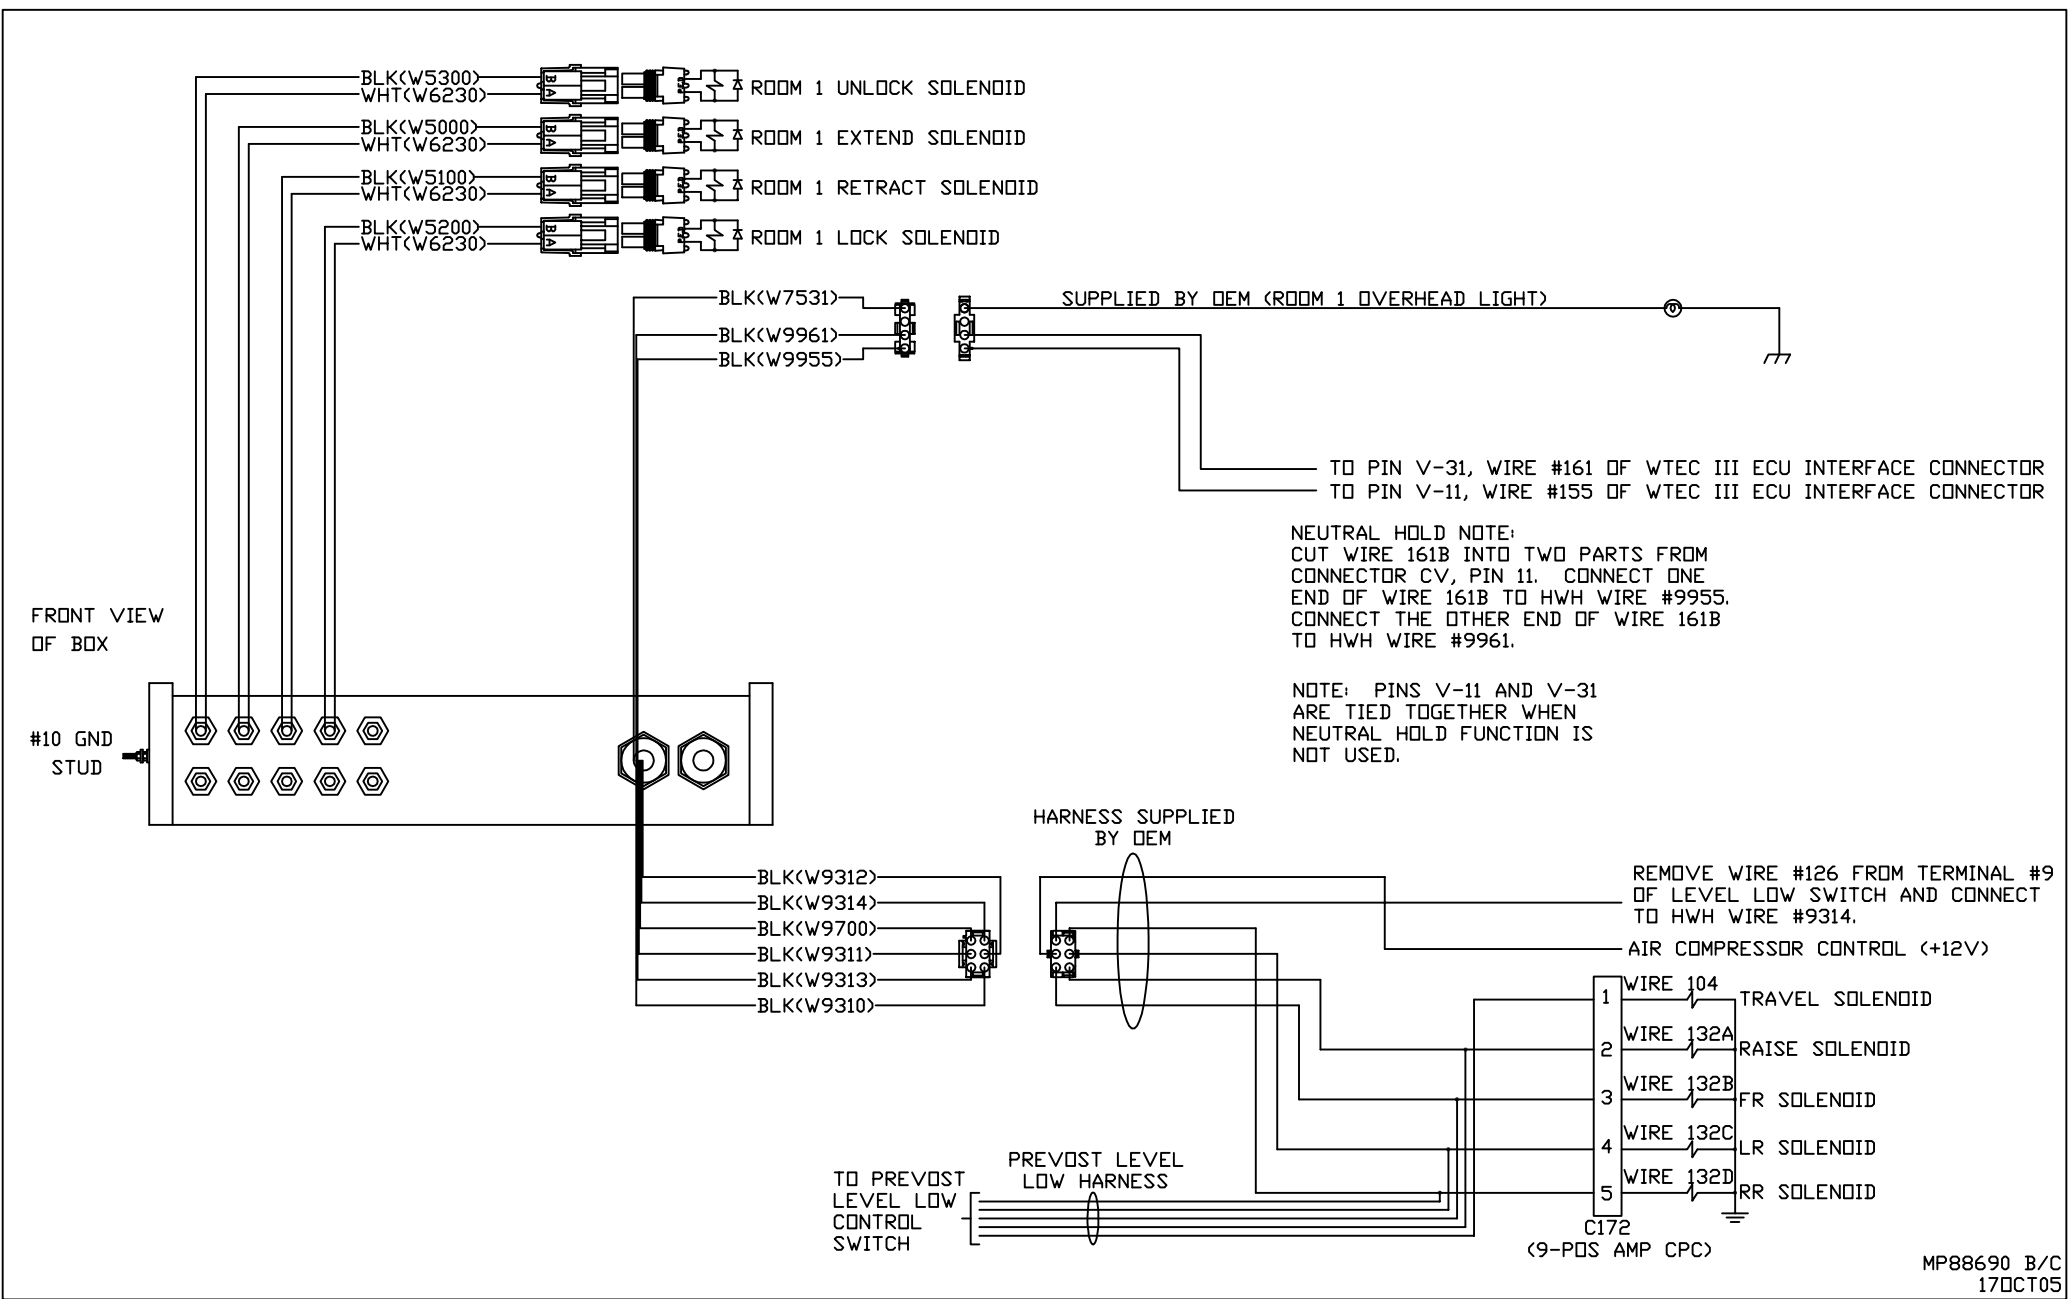

LEVEL LOW NOTE:
 REMOVE WIRE #126F FROM LEVEL LOW TELL TAIL LIGHT AT C171, PIN 19. CONNECT TO HWH WIRE (W9915). REMOVE WIRE #126F FROM LEVEL LOW SWITCH AT C171 PIN 19. CONNECT TO HWH WIRE (W9910).

SPEED SWITCH NOTE:
 HWH WIRE (W9900) MUST BE CONNECTED TO PREVOST WIRE 5NC FROM C475, POS. 5. (REAR JUNCTION BOX)

FRONT VIEW OF BOX

#10 GND STUD

