

CNO (GRAY) PIN

BLK(W6800) SW BATT BLK(W6800) SW BATT

WHT(W6230) GROUND
WHT(W6230) GROUND

CN8 (BLACK) PIN 1 N/C

2 N/C 3 RED(W6800) SW BATT 4 WHT(W6230) GROUND 5 CAN SHIFLD

5 CAN SHIELD

6 RED(W6100) BATTERY

7 GREEN 8 YELLOW PIN

1 N/C

2 N/C

3 BLK(W1000) LF WARN SW

4 BLK(W2000) RF WARN SW

5 BLK(W1200) LF PRESS SW

6 BLK(W2200) RF PRESS SW

7 BLK(W3200) RR PRESS SW

8 BLK(W4200) LR PRESS SW


9 BLK(W4000) LR WARN SW

10 BLK(W4000) LR WARN SW

11 N/C

12 WHT(W6235) GROUND

NOTE: INSTALLATION MUST CONFORM TO GOOD SHOP PRACTICES, SAE STANDARDS, RVIA STANDARDS, AND OTHER APPLICABLE STANDARDS.

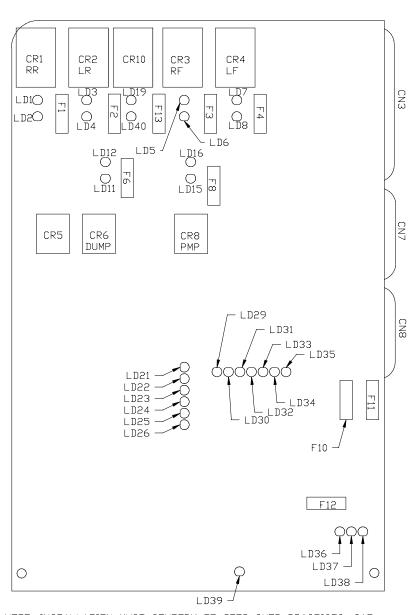

LED # LED 1 LED 2 LED 3 LED 4 LED 5 LED 6	COLOR YELLOW RED YELLOW RED YELLOW RFD	DESCRIPTION RR COIL RR CONTACT LR COIL LR CONTACT RF COIL RF CONTACT
LED 7 LED 8 LED 11 LED 12 LED 15 LED 16 LED 19 LED 21 LED 22 LED 23	YELLOW RED YELLOW RED YELLOW RED YELLOW YELLOW YELLOW YELLOW YELLOW	LF COIL LF CONTACT DUMP COIL DUMP CONTACT PUMP COIL PUMP CONTACT EQ VALVE COIL LF WARN SW RF WARN SW RR WARN SW
LED 24 LED 25 LED 26 LED 30 LED 31 LED 32 LED 33 LED 34 LED 35 LED 36 LED 37 LED 38	YELLOW RED RED YELLOW GREEN RED GREEN RED	LR WARN SW LF PRESS SW RF PRESS SW NOT USED NOT USED MASTER WARNING CONTROL 50 LB PSW INPUT JACK INTERRUPT PARK BRAKE BOARD ENABLED ACCESSORY IN ACCESSORY OUT
LED 39 LED 40	RED RED	LINK LIGHT EQ VALVE CONTACT

FUSE	RATING	DESCRIPTION
F1 F2 F3 F4 F6	15 AMP 15 AMP 15 AMP 15 AMP 5 AMP	RR DUTPUT LR DUTPUT RF DUTPUT LF DUTPUT DUMP
F8	5 AMP	PUMP DUTPUT
F10	7.5 AMP	ACC INPUT
F11	3 AMP	WARN LITE SUPPLY
F12	10 AMP	ACC DUTPUT
F13	15 AMP	EQ VALVE

NDTE: INSTALLATION MUST CONFORM TO GOOD SHOP PRACTICES, SAE STANDARDS, RVIA STANDARDS, AND OTHER APPLICABLE STANDARDS.